

FORD FOCUS RS


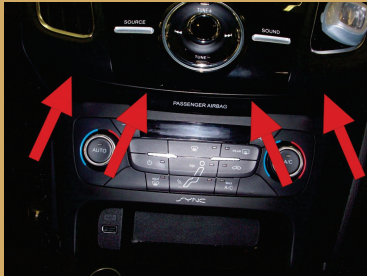


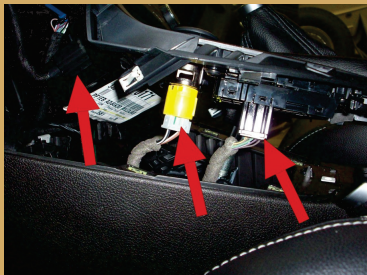
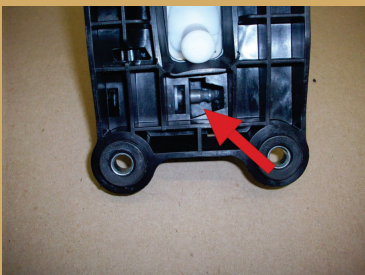

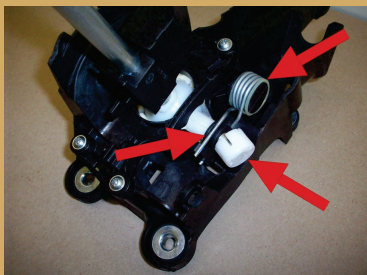
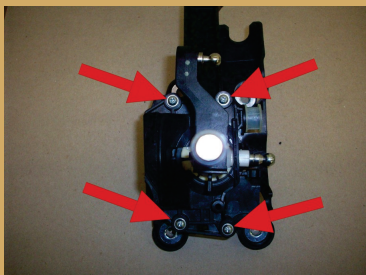
SHORT THROW SHIFTER

TOOLS REQUIRED

M8 socket wrench
M10 socket wrench
7/32 socket wrench
Phillips screw driver
Large flat screw driver
Pliers
Flat file
Small hammer
Scissors

MATERIALS REQUIRED

Mobil 1 synthetic grease

<p>1</p>	<p>2</p>	<p>3</p>	<p>4</p>
<p>Remove the shift knob.</p> 	<p>Remove the shifter trim.</p> 	<p>Remove the top bezel.</p> 	
<p>5</p>	<p>6</p>	<p>7</p>	<p>8</p>
<p>Remove screws holding the shifter panel and remove the panel. Pull up and backward during removing.</p> 	<p>Remove the electrical connections from the bottom of the panel.</p> 	<p>Remove the electrical connections from the top of the panel.</p> 	<p>Disconnect the shifter links and cables. Remove screw holding the shifter assembly. Remove the shifter assembly.</p> 
<p>9</p>	<p>10</p>	<p>11</p>	<p>12</p>
<p>Remove the side shift pivot pin. Pry on the pin with screw driver.</p> 	<p>Remove the side shift arm.</p> 	<p>Snap off the side shift bushing. Remove the centering spring. Remove the rubber grommet.</p> 	<p>Remove the shifter cover screws.</p> 

<p>13</p>	<p>Release the shifter cover latch. Remove the shifter cover and the shifter lever assembly.</p>	<p>14</p>	<p>Remove the shifter lever bushing.</p>
			
<p>17</p>	<p>Remove the factory reverse lock.</p>	<p>18</p>	<p>19</p>
			<p>20</p> 
<p>21</p>	<p>Apply small amount of Mobil synthetic grease to the shifter ball. Install the shifter lever bushing.</p>	<p>22</p>	<p>23</p>
			<p>24</p> 
<p>25</p>	<p>Install the shifter cables. Secure the shifter assembly to the floor. Reconnect the shifter links. Line up the reverse lock with the shift lever.</p>	<p>26</p>	<p>27</p>
			<p>28</p> 