

# Engine Monitors for Honda

**Bold**= Default Log List

## AP3-HON-001

- **AFR Actual**
- **AFR Commanded (Final)**
- **Accelerator Pedal Position**
- **Air Charge**
- **Air Charge Desired**
- **Air Mass Flow**
- **Barometric Pressure**
- **Battery Voltage**
- Brake Pressure
- **Catalyst Temperature (Modeled)**
- **Clutch Pedal Position**
- **ETC Angle Actual**
- **Engine Coolant Temperature (Sensor 1)**
- **Engine Coolant Temperature (Sensor 2)**
- **Engine Speed**
- **FRP Actual**
- **FRP Desired**
- **Fuel Status**
- **Gear**
- **HPFP Spill Valve Duty Cycle (Feed Forward)**
- **HPFP Spill Valve Duty Cycle (Final)**
- **Ignition Timing Cyl 1**
- **Ignition Timing Cyl 2**
- **Ignition Timing Cyl 3**
- **Ignition Timing Cyl 4**
- **Injection Time**
- **Intake Air Temperature**
- **Knock Level (Reference)**
- **Knock Ratio (Int/Ref)**
- **Knock Ratio (Int/Ref) (2)**
- **Knock Retard Cyl 1**
- **Knock Retard Cyl 2**
- **Knock Retard Cyl 3**
- **Knock Retard Cyl 4**
- Lateral Acceleration
- **Long Term Fuel Trim**
- Longitudinal Acceleration
- **MAF (Mass Air Flow sensor) Voltage**
- **MAP (Manifold Absolute Pressure)**

- **Manifold Air Temperature**
- **Oil Pressure**
- **Pressure Upstream Throttle (PUT) Actual**
- **Pressure Upstream Throttle (PUT) Desired**
- **Short Term Fuel Trim**
- **Steering Angle**
- **VTC-E Position Desired**
- **VTC-E Position Actual**
- **VTC-I Position Actual**
- **VTC-I Position Desired**
- **VTEC Lift State**
- **Vehicle Speed**
- **Wastegate Position Actual**
- **Wastegate Position Desired**
- **Wheel Speed (LF)**
- **Wheel Speed (LR)**
- **Wheel Speed (RF)**
- **Wheel Speed (RR)**