



**GrimmSpeed Install Guide Series**  
**Installing the GrimmSpeed License Plate Relocation Kit**  
**Updated 3/20/18**



**Introduction:**

This guide will walk you through the installation of the GrimmSpeed License Plate Relocation Kit.

We are installing on our 2018 WRX, but the install is generally the same for all of our kits

The difficulty here is low, so take your time and enjoy the job!

**Tools:**

The tools listed below are suggested for this task. Optional tools are noted.

- 17mm Wrench
- Small Flathead Screw Driver
- 5mm Allen Wrench
- Included Hardware

**Tip:** Be sure to tighten all bolts securely to prevent bolts from coming loose while driving!

If you have any questions don't hesitate to contact us directly!

Support@GrimmSpeed.com | 612-379-0000

## Procedure:

1. Begin by removing your tow hook cover located on the left passenger side of your bumper. To do this you will want to use a small flat head screw driver to pry it out. Take your time and be careful to not scratch your paint.



2. Take the long tow hook bolt included in your kit and thread it into the hole

This is a 17mm standard thread clockwise bolt.

Once you have the bolt hand tightened, use your 17mm socket wrench to securely tighten the bolt in place.



3. Take the included U-bracket and the longer of the three allen head bolts.

Run the bolt with the U-bracket facing outwards through the U-bracket and thread into the hole on the tow hook bolt.


4. At this point you'll want to position the U-bracket the way you want your frame to sit.

Using a 5mm allen, tighten the U-bracket on to the tow hook bolt.



5. Our License Plate Holder is designed with adjustability in mind.

Use the notches in the plate to determine where you want your plate mounted.

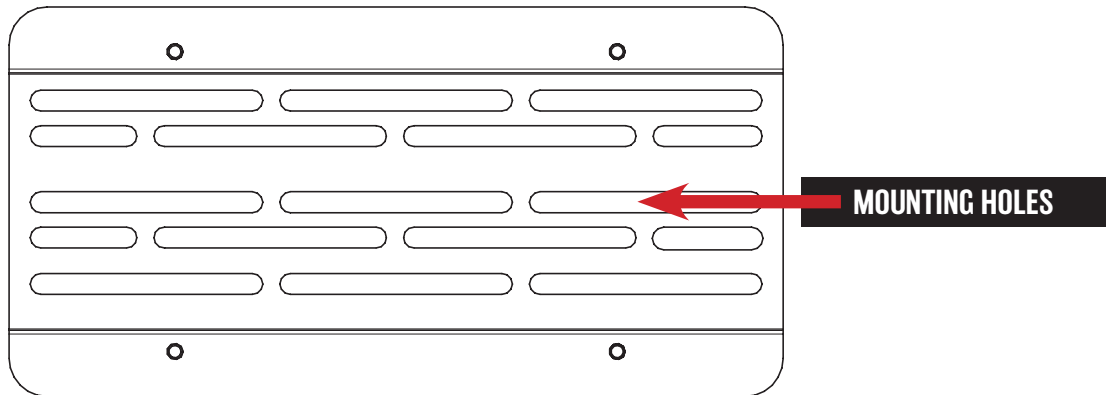

Using the 2 included short 5mm allen bolts, attach the plate to the U-bracket.



6. With the last 4 included allen screws, attach your license plate and frame to your relocation kit



We have included two GrimmSpeed License Plate Frames in your kit.  
If you chose to run our frame, attach one to you license plate before the next step!

\*Note: Version One GrimmSpeed License Plate Frames have a molded notch on the inside bottom. It may be nesscessary to remove the notch in order to get the frame to sit correctly.

7. Your all done! Enjoy the new modified look of your front bumper!

**Disclaimer:** Becareful when taking your vehicle through an automated / brush carwash. Brushes on touch carwashes could get snagged on Relocation Kit. We recommend using either a touchless carwash or selfwash to avoid damage to car and/or our License Plate Relocation Kit.