



## GrimmSpeed Install Guide Series

### Installing the Catback Exhaust System - Subaru 11-14 WRX, 08-14 STI

Updated 6/25/18



#### **Introduction:**

This guide will illustrate the installation of the GrimmSpeed Catback Exhaust System for Subaru 11-14 WRX, 08-14 STI.

The difficulty here is medium, so take your time and enjoy the job! Install time is around 60-90 min

#### **Tools:**

The tools listed below are suggested for this task. Optional tools are noted.

- 14mm Wrench
- 17mm Wrench
- Pliers / Channel Lock

Note: Depending on previous modifications, you may need an exhaust adaptor to complete the install.

## Procedure:

1. Begin by collecting your tools and safely putting your car on jack stands.
2. Remove the two bolts connection your muffler section from the mid-pipe.



3. Next remove the two bolts connecting the downpipe to the mid-pipe.

\*On this install we have our GrimmSpeed Divorced Downpipe installed, your connection will look different if you have an OEM Downpipe.



4. Now undo the exhaust hanger. You can use a pliers to pry the bracket out of the hanger.



5. With the bolts and the hanger removed, the mid-pipe should be able to be pulled down and removed from the car.



6. Now take the muffler section off the car by undoing the four exhaust hangers.



7. Our kit includes four new GrimmSpeed Poly Exhaust Hangers. You can remove the OEM hangers from the car.



8. Grab your new hangers and use a mixture of dishsoap and water to lubricate the mounting holes and pop them into place.



9. Once all the hangers are in place, use your soap and water mixture to lubricate the other mounting holes.



10. For this install the upper mounting points are typically the ones you will want to use. It all depends on the look you want to achieve.



11. Push the exhaust hangers into the mounting holes as far as you can.



12. Now install the intermediate pipe on the OEM hanger.



13. Using the included bolts, nuts and gaskets, bolt up the intermediate pipe to the muffler section.




14. Next, line up and install the mid-pipe.



15. Using the included hardware and gaskets attached the mid-pipe to the intermediate pipe. Then bolt up the downpipe to the mid-pipe.



16. Go back and tighten all the joints.

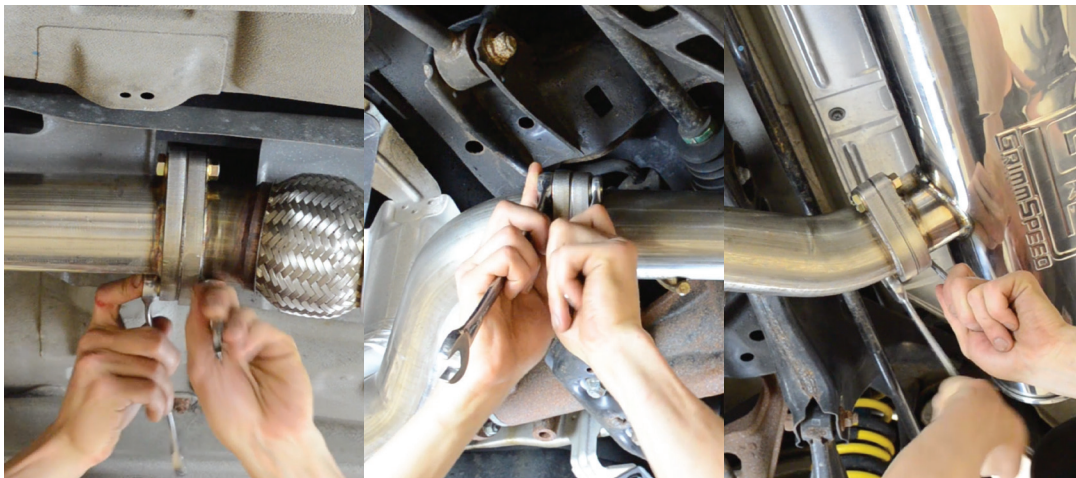

17. And your done! Enjoy your new GrimmSpeed Catback Exhaust!

