



Installation guide

LP Adventure Bumper guard (small & big)

Subaru Crosstrek - 2018





Necessary tools :



- Ratchet
- 12mm Socket
- 14mm Socket
- 12mm wrench
- 14mm wrench
- Long nose pliers
- A small knife, or a dremel

Please note that you can keep the original skid plate, you just have to cut it.


#1. Cut the OEM skid plate

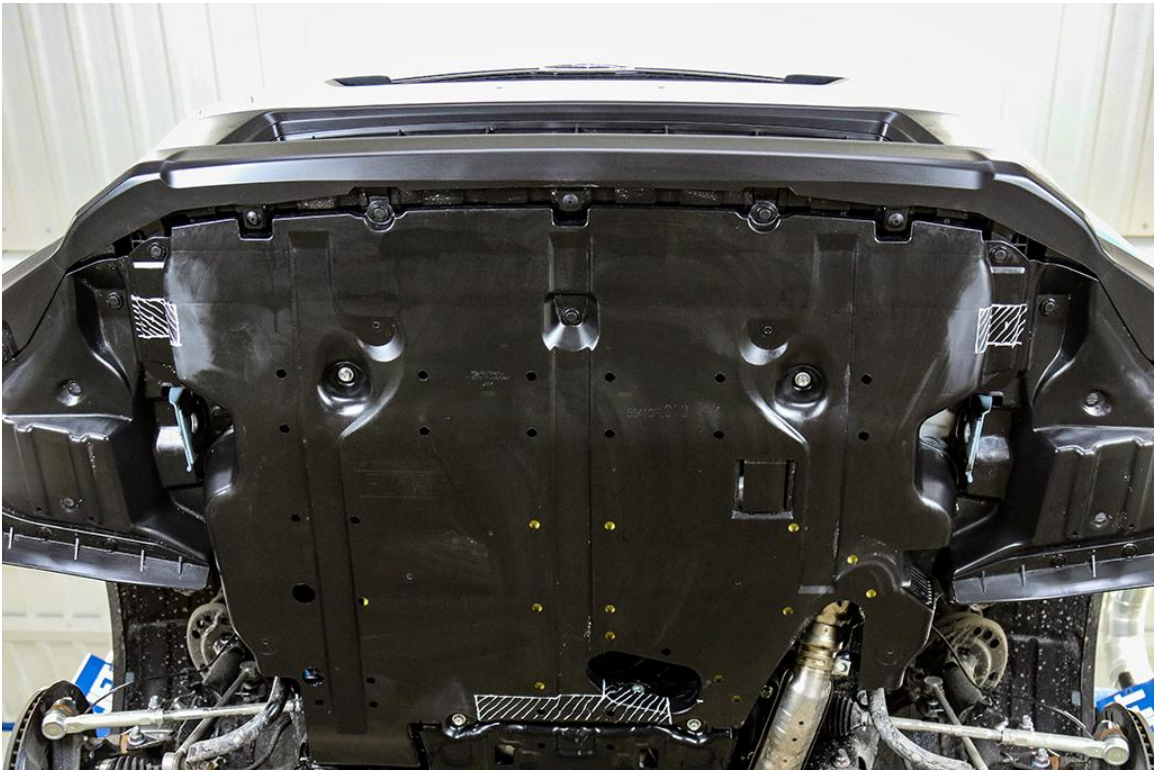

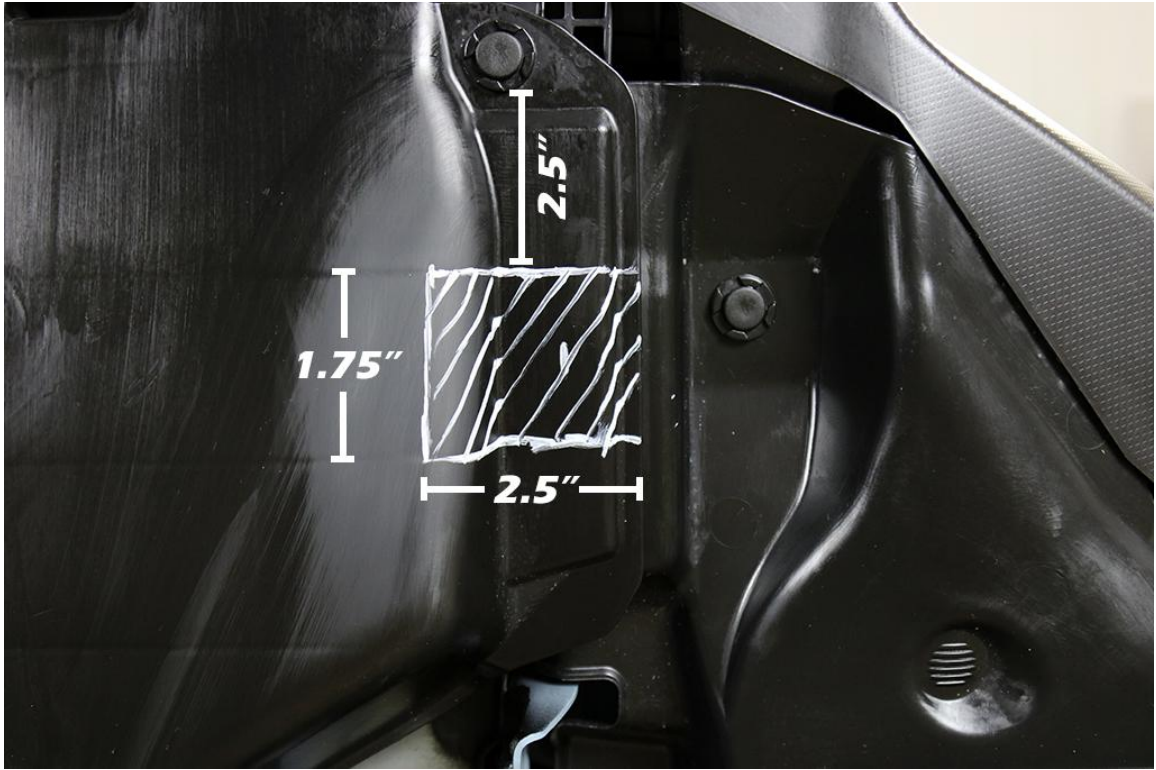


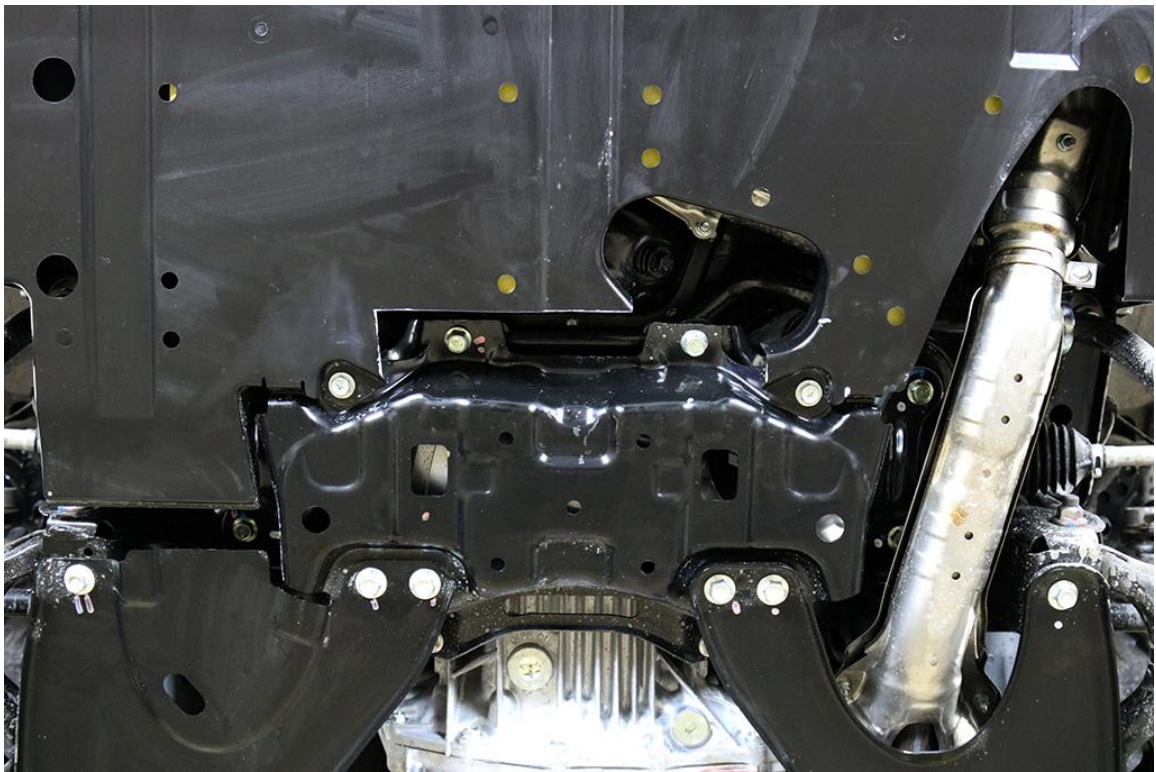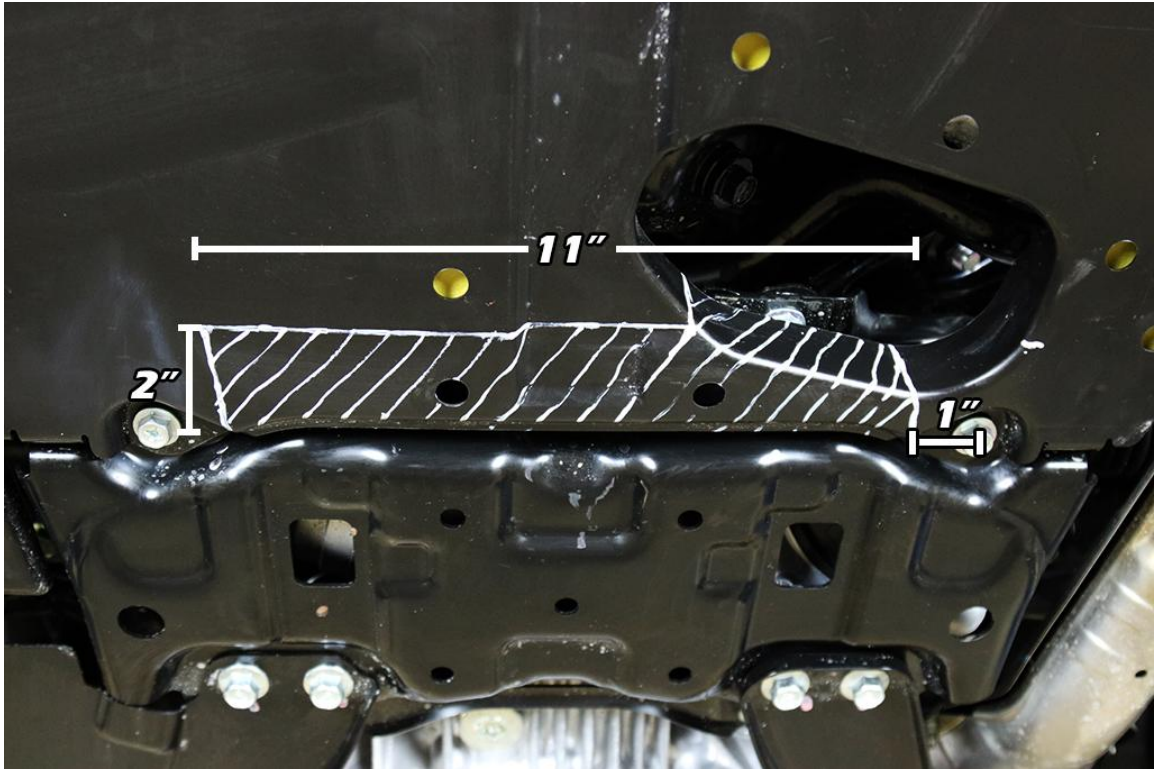

#2. Remove the OEM skid plate

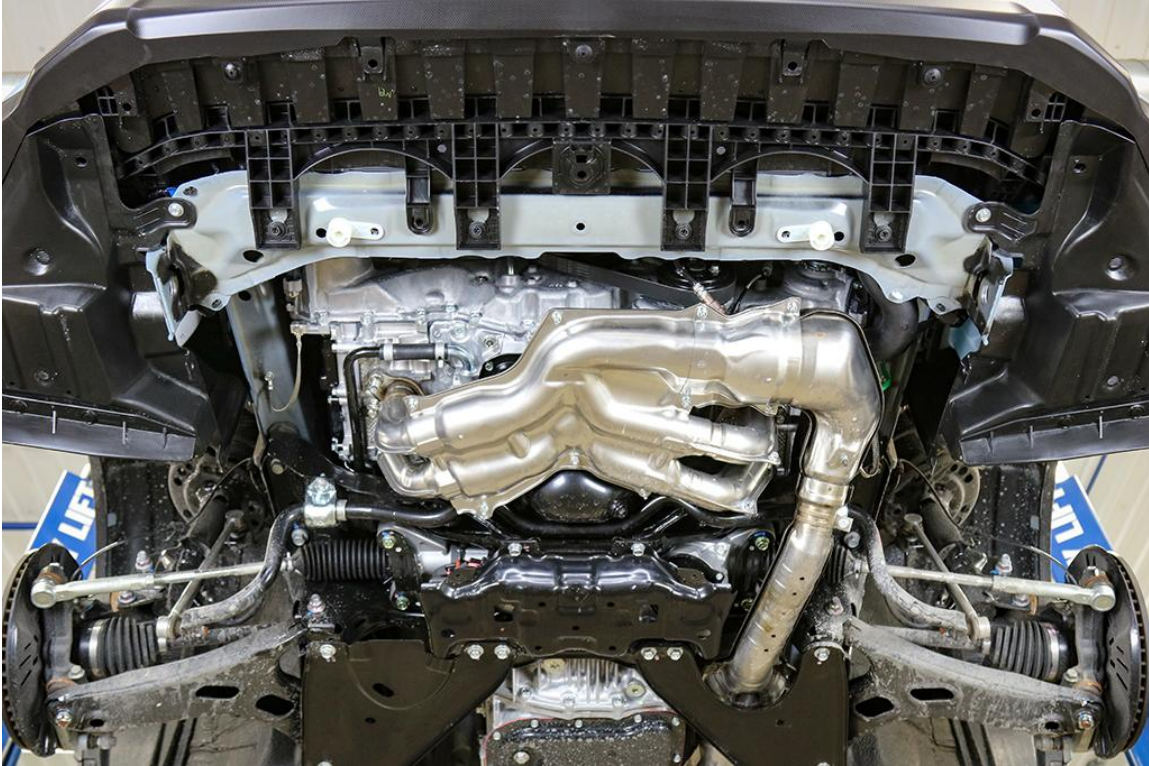



Unscrew this bolt

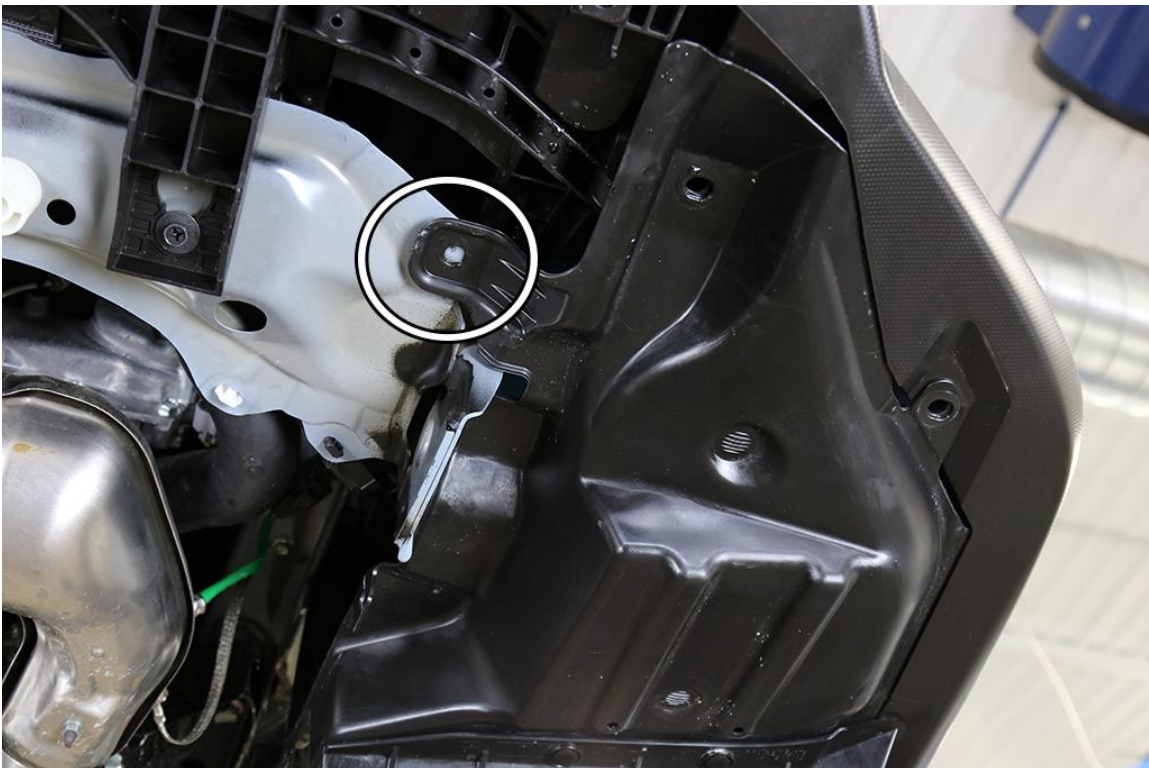




#3 : Install the 2 rods

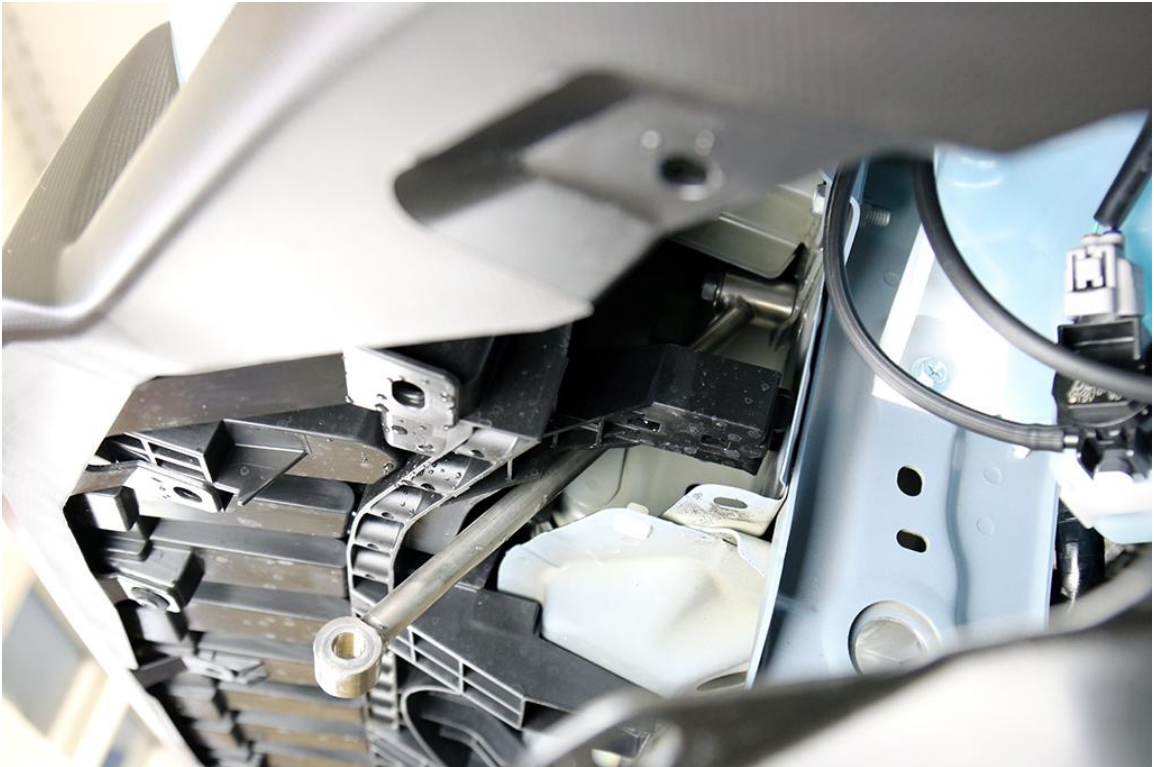


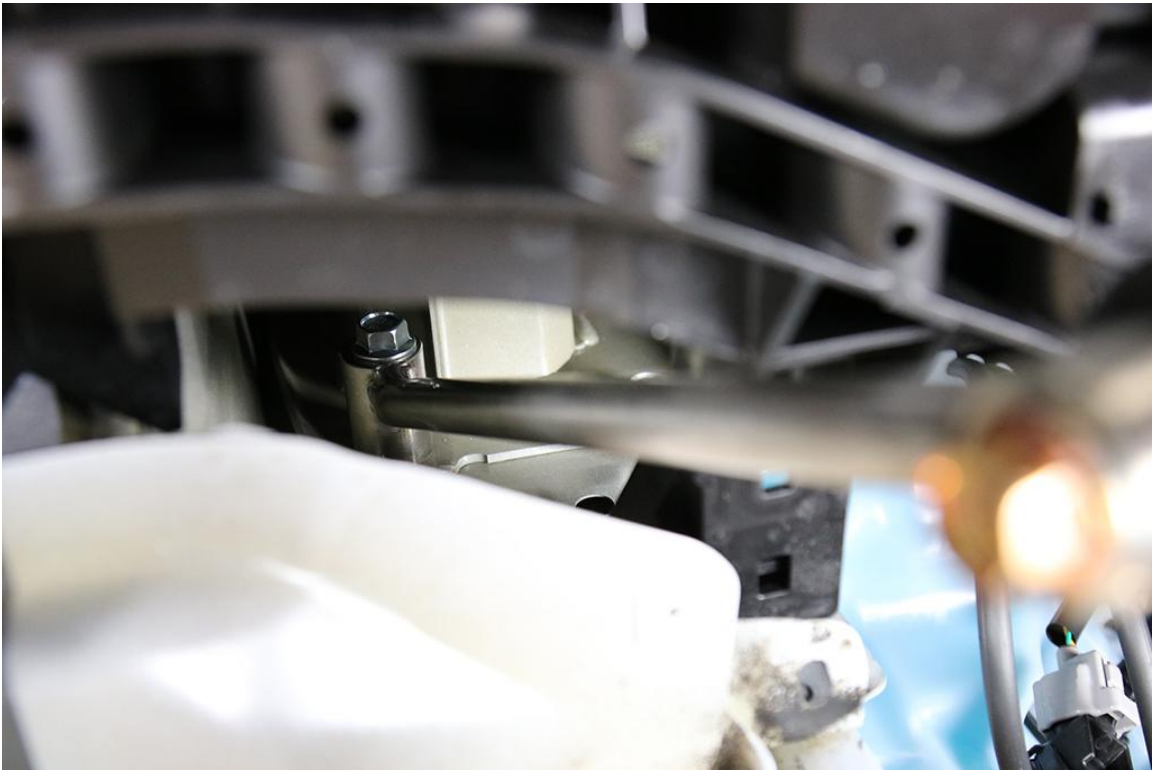

#4 : Reinstall the OEM skid plate

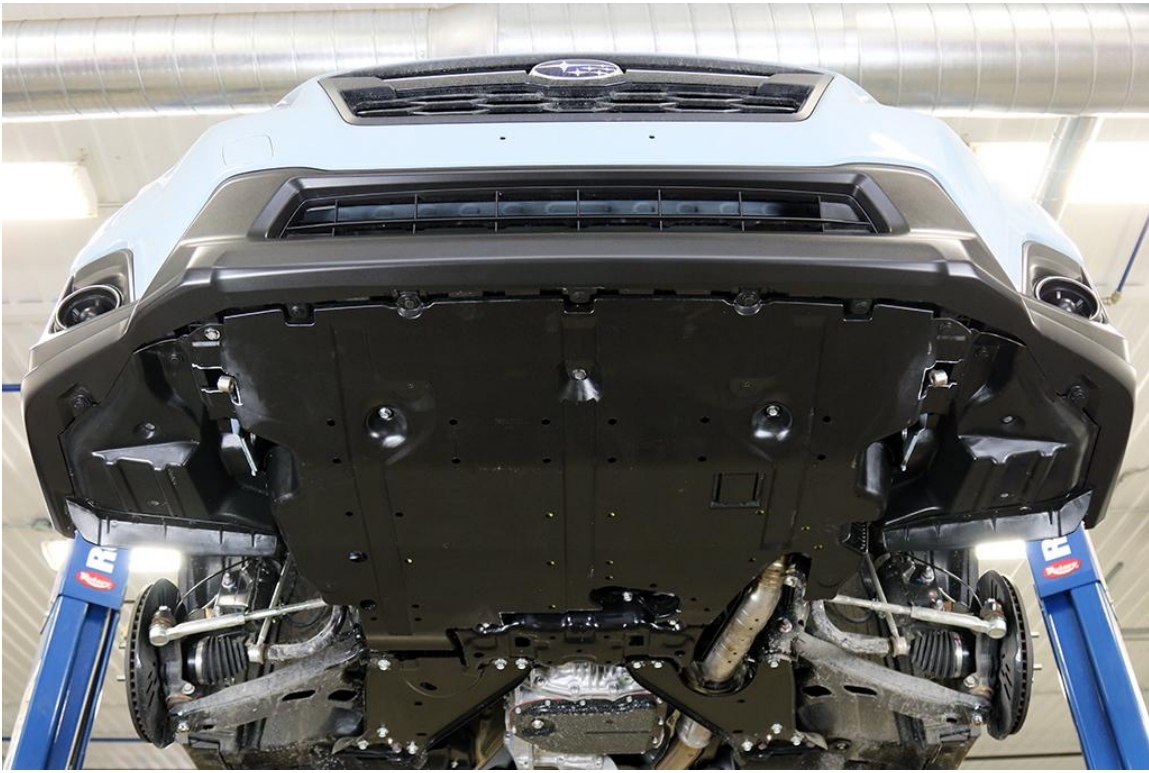


#5 : Unscrew these two bolts

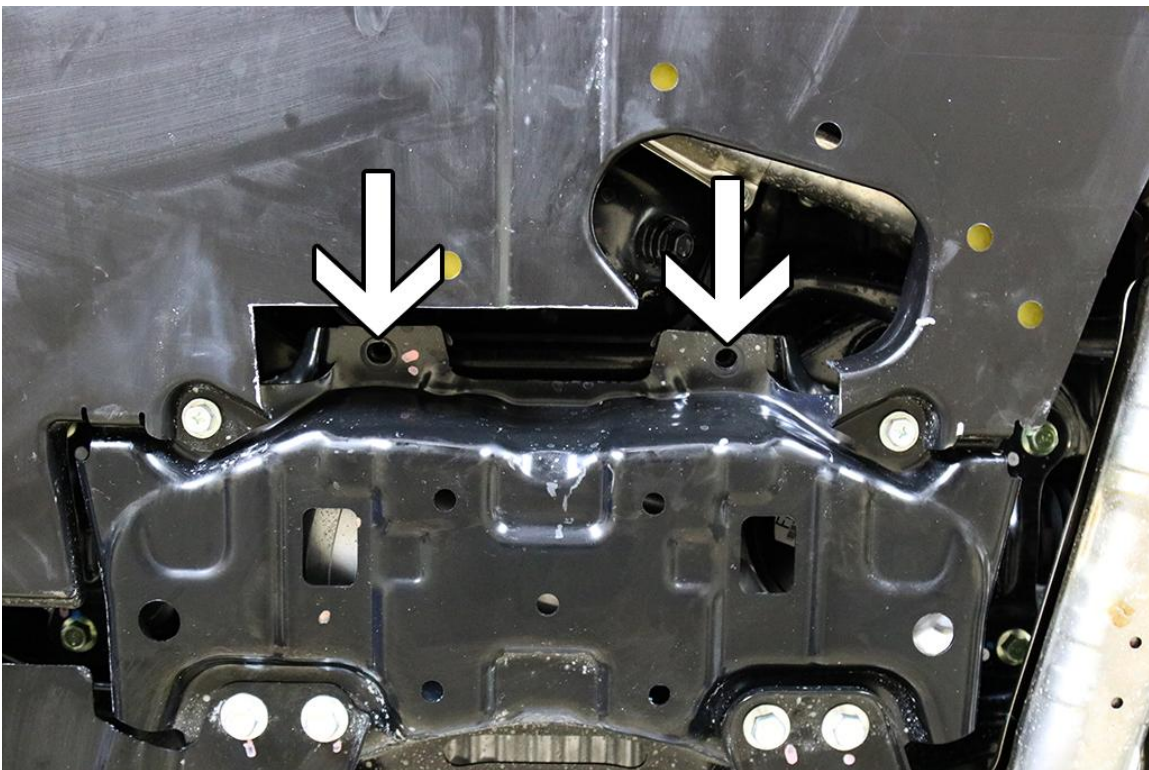


#6 : Attach the bumper guard to the bracket

***** Do not screw the bolts to the end (you can tighten these after step # 7) *****

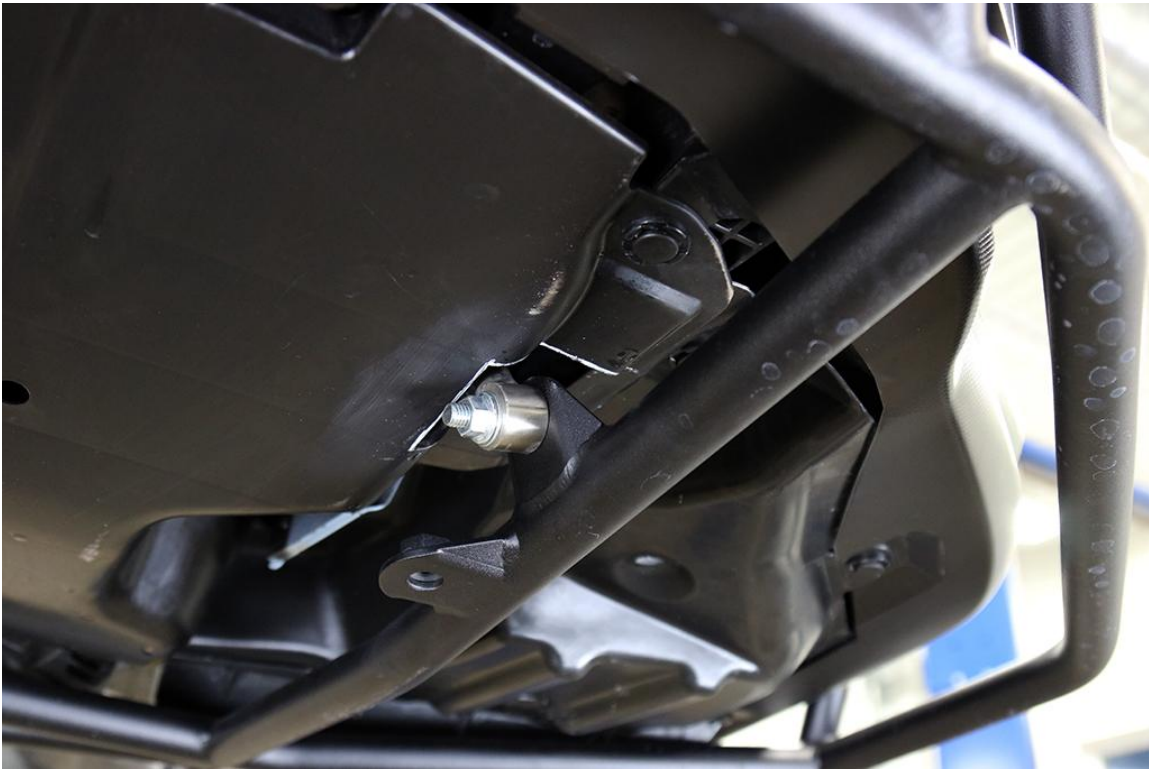

#7 : Bolt up the rear section of the bumper guard

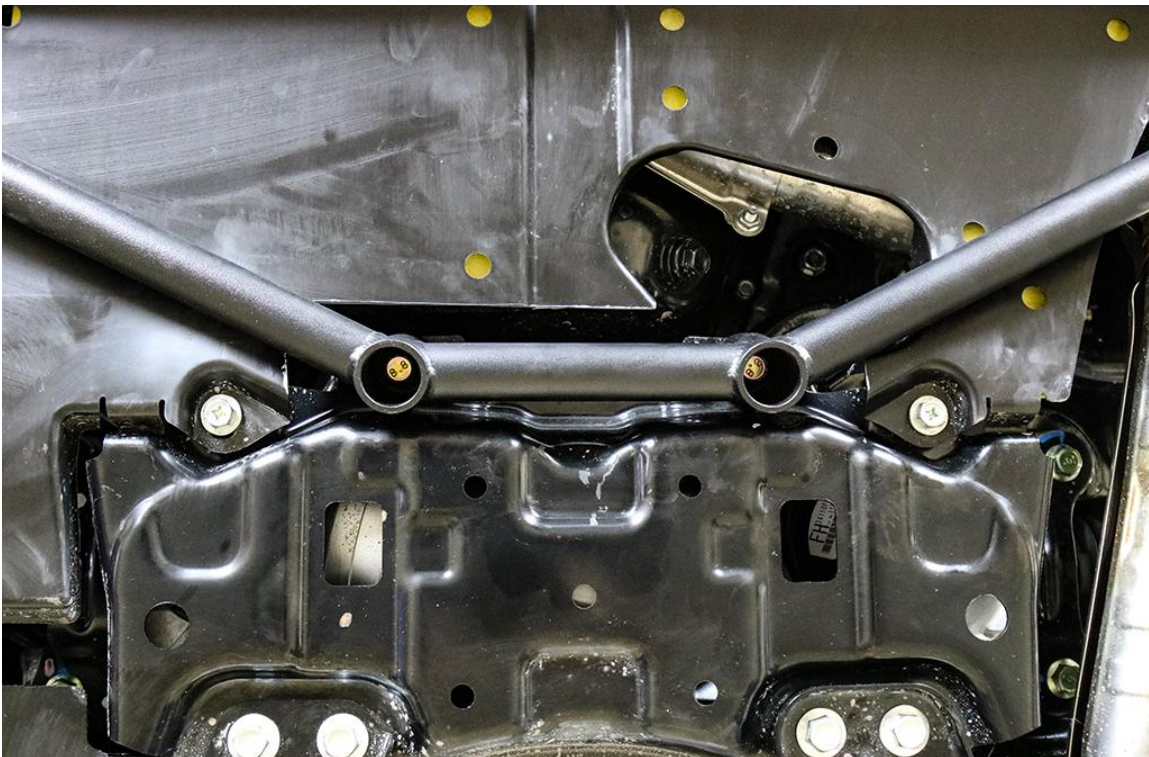

#8 : You can now completely screw the bolts of the bracket



You have finalized the installation!



Thank you for your interest in our products.

For all requests for information or for assistance:

Contact our team by phone at

1 - (450) 409-1344

1 - (866) 562-1316 (toll free)

**We are available Monday to Friday between 8:00
and 17:00.**

Or by email at :

sales@lachuteperformance.com

www.lpaventure.com

