
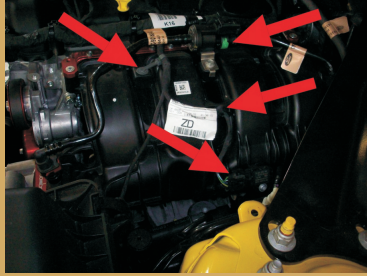
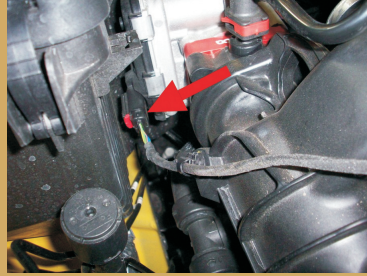

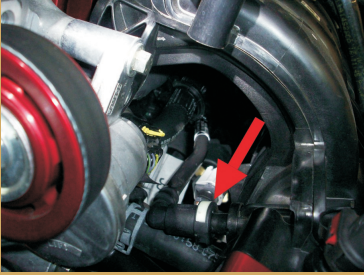
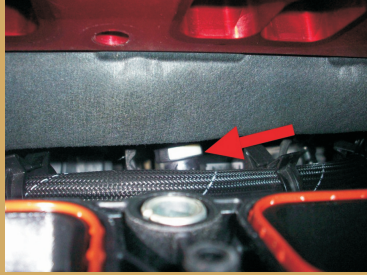








FORD MUSTANG EB CATCH CAN STAGE 2


TOOLS REQUIRED

M8, M10 sockets
Flat screw driver
1/2 socket
M4, M5, M6 allen wrench
Box cutter
Heat gun
Work gloves


MATERIALS REQUIRED

<p>1</p> <p>Remove the engine cover.</p>	<p>2</p> <p>Remove the bolts holding the intake manifold. Pull the manifold away from the engine.</p>	<p>3</p> <p>Disconnect the throttle body. Remove the wire harness.</p>	<p>4</p> <p>Disconnect the MAP sensor and the VVT solenoid</p>
			
<p>5</p> <p>Press the white tab and remove the vent line from the intake manifold.</p>	<p>6</p> <p>Press the white tab and remove the vent line from the engine block.</p>	<p>7</p> <p>Prepare the Catch Can installation kit.</p>	<p>8</p> <p>Switch the Catch Can's fittings.</p>
			
<p>9</p> <p>Cut the factory vent line.</p>	<p>10</p> <p>Oil the fittings and vent hoses.</p>	<p>11</p> <p>Heat the ends with the heat gun. Install the fittings and secure them with the hose clamps.</p> <p>WEAR HEAVY DUTY WORK GLOVES TO PREVENT BURNS.</p>	<p>12</p> <p>Connect new vent lines to the fittings and secure them with the hose clamps. Longer hose to "OUT", shorter hose to "IN".</p>
			

13 Connect the vent line to the engine block.

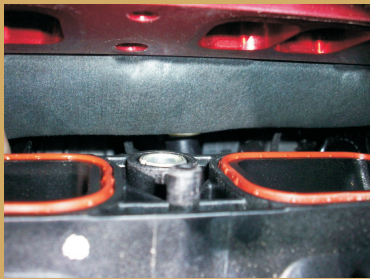

14 Connect the vent line to the intake manifold.

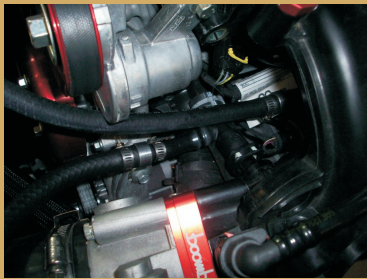

15 Reinstall intake manifold and reconnect the wire harness.



16 Install the Catch Can.



17 Connect the vent lines to the Catch Can.



18 Install the engine cover.

