

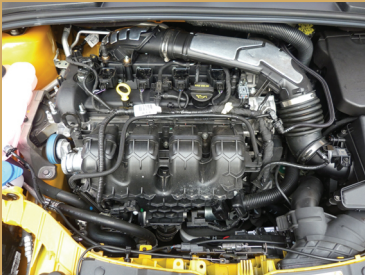
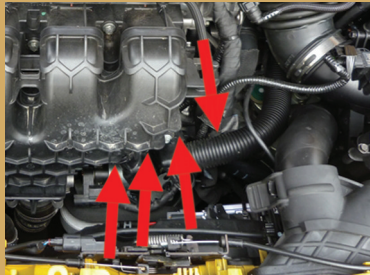


# FORD FOCUS ST SYMPOSER DELETE KIT

## TOOLS REQUIRED

M8 socket wrench  
M8 box wrench  
T20 torx bit  
Pry tool

## MATERIALS REQUIRED

None

<p><b>1</b></p> <p>Remove the engine cover.</p>	<p><b>2</b></p> <p>Pull sound symposer tube off the manifold. Remove (3) 8mm bolts holding the sound symposer. Remove the sound symposer.</p>	<p><b>3</b></p> <p>Use OEM 8mm bolts to attach the Boomba sound symposer block-off plate to the intake manifold.</p>	<p><b>4</b></p> <p>At this point you have 2 options: Use provided delrin plug and insert it into the symposer tube. Use provided zip tie to attach the tube to the manifold to keep it from moving around.</p>
			
<p><b>5</b></p> <p>OR: Locate and remove the symposer valve that's between the intake tube and battery.</p>	<p><b>6</b></p> <p>Remove battery cover for easier access. Unplug the harness.</p>	<p><b>7</b></p> <p>Use T20 torx bit to remove the screw. Use pry tool to remove plastic clip. Unplug tube from rubber firewall elbow. LEAVE ELBOW. Remove symposer valve.</p>	<p><b>8</b></p> <p>Insert delrin plug into rubber firewall elbow.</p>
