



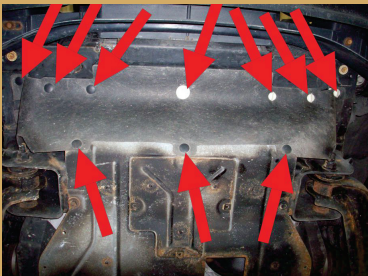
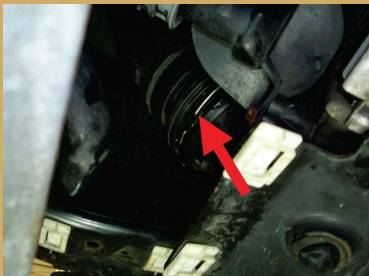
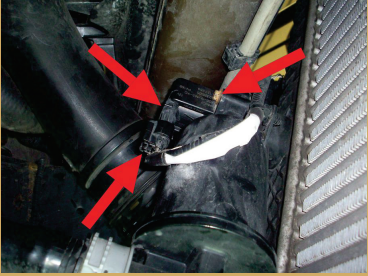

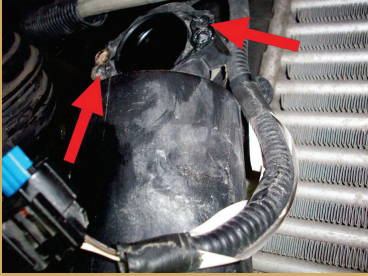
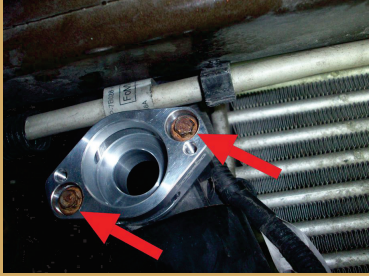
# FORD F-150 BLOW OFF ADAPTOR INSTALLATION MANUAL

## TOOLS REQUIRED

Set of car stands      Flat screw driver  
M8 socket  
M6 allen wrench  
Pliers

## MATERIALS REQUIRED

None

<p><b>1</b> When lifting the car always use stands to secure the car.</p>	<p><b>2</b> Loosen up the snap ring.</p>	<p><b>3</b> Remove the bottom guard.</p>	<p><b>4</b> Remove the snap ring and the charge pipe.</p>
			
<p><b>5</b> Disconnect the wire harness. Remove the bolts and the blow off valve.</p>	<p><b>6</b> Boomba Blow Off Valve Adaptor ready for installation.</p>	<p><b>7</b> Holes used for mounting the Boomba Blow Off Valve Adaptor.</p>	<p><b>8</b> Install the Boomba Blow Off Valve Adaptor and secure it to the housing using stock bolts.</p>
			
<p><b>9</b> Secure the blow of valve to the adaptor with provided screws.</p>	<p><b>10</b> Reconnect the wire harness.</p>	<p><b>11</b> Install the charge pipe and secure it with the snap ring.</p>	<p><b>12</b> Install the bottom guard.</p>
