



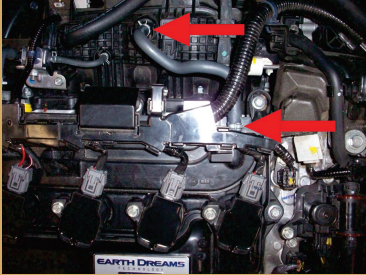
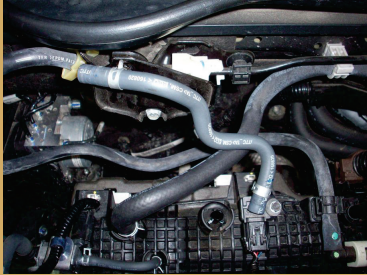

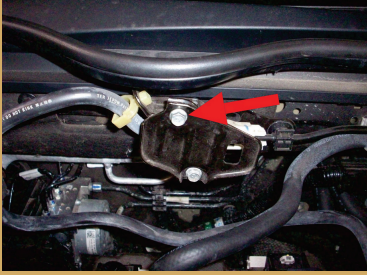
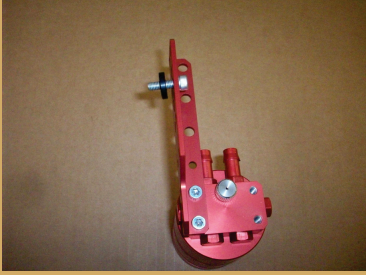
# CIVIC X - CATCH CAN STAGE 2

## TOOLS REQUIRED

M10 socket wrench  
4 MM allen wrench  
5 MM allen wrench  
Flat screw driver  
Pliers

## MATERIALS REQUIRED

None

<p><b>1</b></p>	<p>Secure the universal mounting bracket to the Catch Can.</p>	<p><b>2</b></p>	<p>Prepare the installation kit.</p>
		<p><b>3</b></p> 	<p><b>4</b></p> 
<p><b>5</b></p>	<p>Connect the OEM vent line to the intake manifold.</p>	<p><b>6</b></p>	<p><b>7</b></p>
		<p><b>8</b></p> 	<p>Secure the Catch Can to the body. Make sure that the spacer is placed between the mounting bracket and the body. Connect the OEM line to the "OUT" port. Connect the supplied line to the "IN" port.</p> 