

# Type R - CATCH CAN STAGE 2

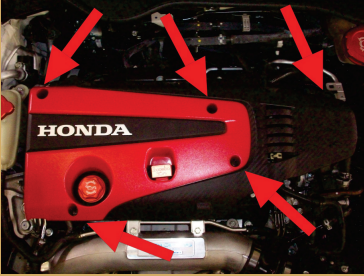

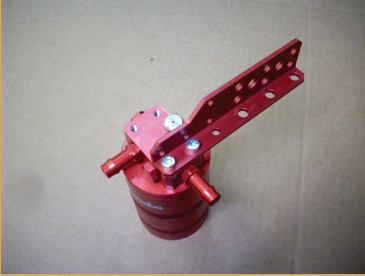
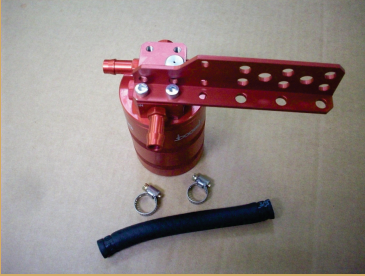
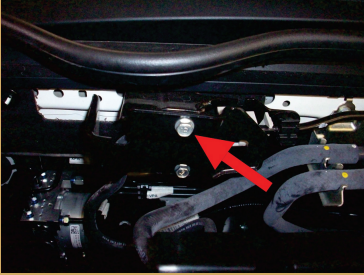
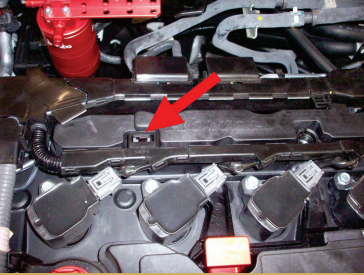


## TOOLS REQUIRED

1/2" socket wrench  
M10 socket wrench  
4 MM allen wrench  
5 MM allen wrench  
Flat screw driver

Pliers

## MATERIALS REQUIRED

None

<p><b>1</b></p> <p>Remove the engine cover.</p>	<p><b>2</b></p> <p>Install Catch Can fittings in the proper orientation.</p>	<p><b>3</b></p> <p>Secure the universal mounting bracket to the Catch Can.</p>	<p><b>4</b></p> <p>Prepare the installation kit.</p>
			
<p><b>5</b></p> <p>Remove the bolt.</p>	<p><b>6</b></p> <p>Unlock the wire harness clip and move the wire harness to the side.</p>	<p><b>7</b></p> <p>Disconnect the vent hose from the valve cover.</p>	<p><b>8</b></p> <p>Secure the catch can to the body. Reuse the OEM vent line and connect it to the "OUT" port.</p>
			
<p><b>9</b></p> <p>Connect the included vent line from the valve cover to the "IN" port.</p>	<p><b>10</b></p> <p>Reattach the wire harness.</p>	<p><b>11</b></p> <p>Reinstall the engine cover.</p>	
