






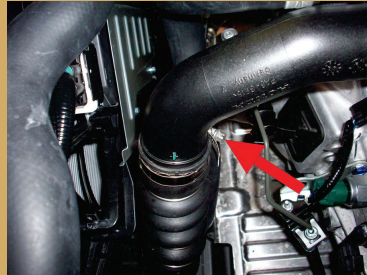
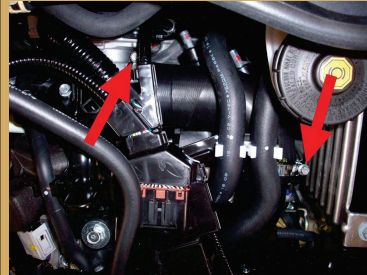
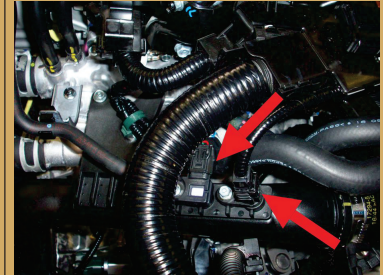
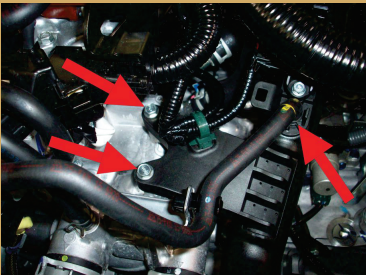
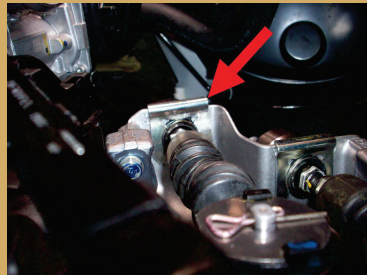
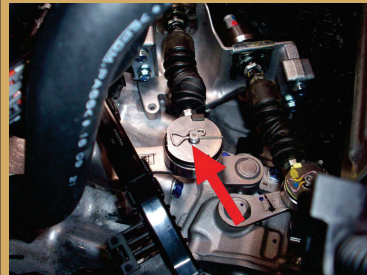
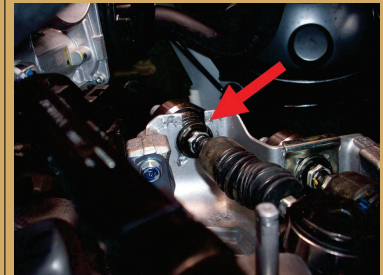
CIVIC X - SHIFTER PLATE INSTALLATION MANUAL

TOOLS REQUIRED

M5.5 socket wrench
M8 socket wrench
M10 socket wrench
4 MM allen wrench
Flat screw driver
Pliers
Small hammer

MATERIALS REQUIRED

None
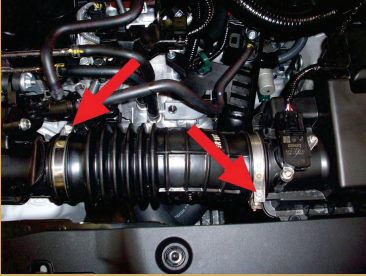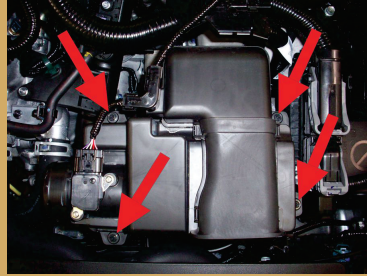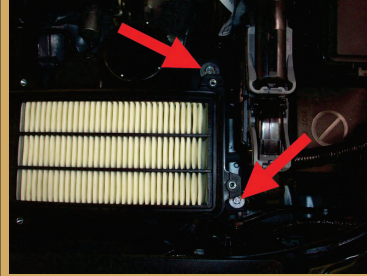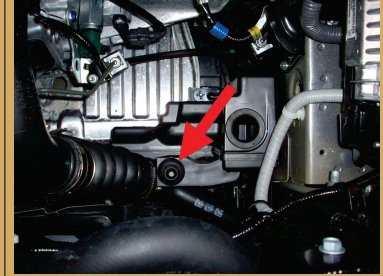
<p>1</p> <p>Remove the air tube.</p>	<p>2</p> <p>Remove the air filter cover.</p>	<p>3</p> <p>Remove the air filter box.</p>	<p>4</p> <p>Remove the rubber grommet.</p>
			
<p>5</p> <p>Insert the rubber grommet into the base of the air filter box.</p>	<p>6</p> <p>Remove the charge pipe clamp.</p>	<p>7</p> <p>Remove the throttle body elbow clamps.</p>	<p>8</p> <p>Disconnect the wire harnesses connected to the charge pipe sensors.</p>
			
<p>9</p> <p>Disconnect the vacuum line from the charge pipe.</p>	<p>10</p> <p>Remove the shifter cable clip.</p>	<p>11</p> <p>Remove the shifter bushing cotter pin.</p>	<p>12</p> <p>Remove the shifter cable assembly.</p>
			


13

Prepare the Boomba Racing shifter plate for assembly.




14

Make sure that the shifter cable adaptor's bolts are threaded into the adaptor.

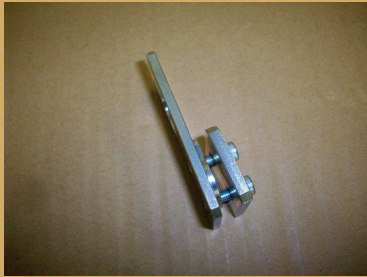


15

Install the shifter cable adaptor.

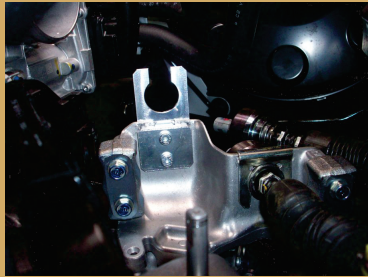


16

Install the shifter plate and secure it to the shifter arm with provided bolts.

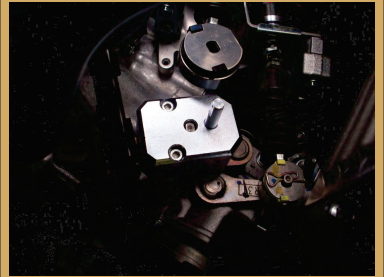


17

Install the shifter cable clip.

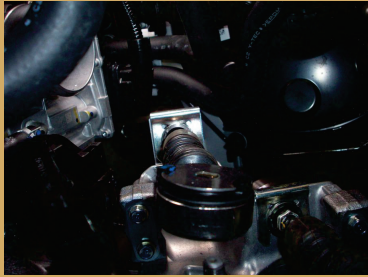


18

Connect the shifter cable and install the cotter pin.

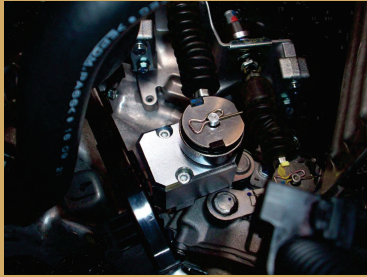

19

Install the charge pipe. Connect the wire harnesses. Connect the vacuum line.

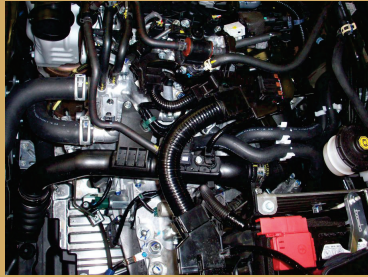

20

Install the air filter box and the air tube.

