



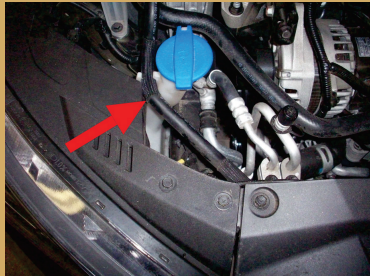
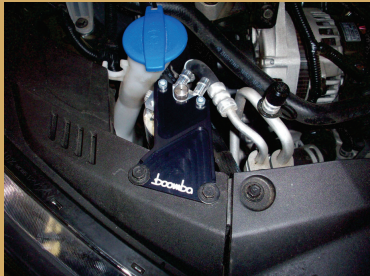
VELOSTER TURBO 19+ CATCH CAN STAGE 1

TOOLS REQUIRED

Pliers
M10 socket wrench
4 mm Allen wrench

MATERIALS REQUIRED

None

<p>1</p> <p>Prepare Veloster 19+ Stage 1 mounting kit.</p>	<p>2</p> <p>Secure the mounting bracket to the Catch Can</p>	<p>3</p> <p>Move the coolant line to the right side of the windshield washer reservoir.</p>	<p>4</p> <p>Mount the Catch Can beside the front passenger side headlight using the existing bolts.</p>
			
<p>5</p> <p>Remove the engine cover. Remove the factory vent line.</p>	<p>6</p> <p>Install the provided vent hoses. The longer hose should be connected to the intake.</p>	<p>7</p> <p>Connect the vent from the valve cover to the "IN" port. Connect the vent from the intake to the "OUT" port. Use the zip ties to dress up the vent hoses.</p>	<p>8</p> <p>Install the engine cover.</p>
