


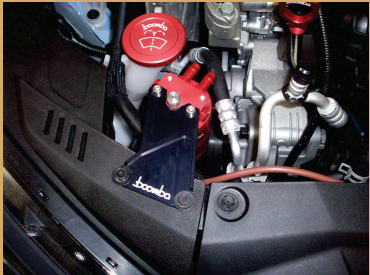


# VELOSTER N CATCH CAN S2

## TOOLS REQUIRED

M10 socket wrench  
1/2 inch socket wrench  
4 MM allen wrench  
Flat screw driver

## MATERIALS REQUIRED

<p><b>1</b></p> <p>Prepare Veloster N Stage 2 mounting kit.</p>	<p><b>2</b></p> <p>Change the hose fittings location. Looking at the fittings "OUT" should be on the left side and "IN" on the right side.</p>	<p><b>3</b></p> <p>Secure the mounting bracket to the Catch Can.</p>	<p><b>4</b></p> <p>Mount the Catch Can beside the front passenger side headlight using the existing bolts.</p>
			
<p><b>5</b></p> <p>Remove the engine cover. Cut the factory vent line.</p>	<p><b>6</b></p> <p>Rotate the vent line connected to the valve cover around 180 degrees.</p>	<p><b>7</b></p> <p>Connect the vent from the valve cover to the "IN" port. Connect the vent from the intake manifold to the "OUT" port. Use the zip ties to dress up the vent hoses.</p>	<p><b>8</b></p> <p>Install the engine cover.</p>
