


WHAT IS INCLUDED

1. CTS Breather Plate
2. Mounting Bracket
3. Breather Hoses
4. CTS Catch Can
5. Mounting rod
6. Breather adapter
7. Hardware

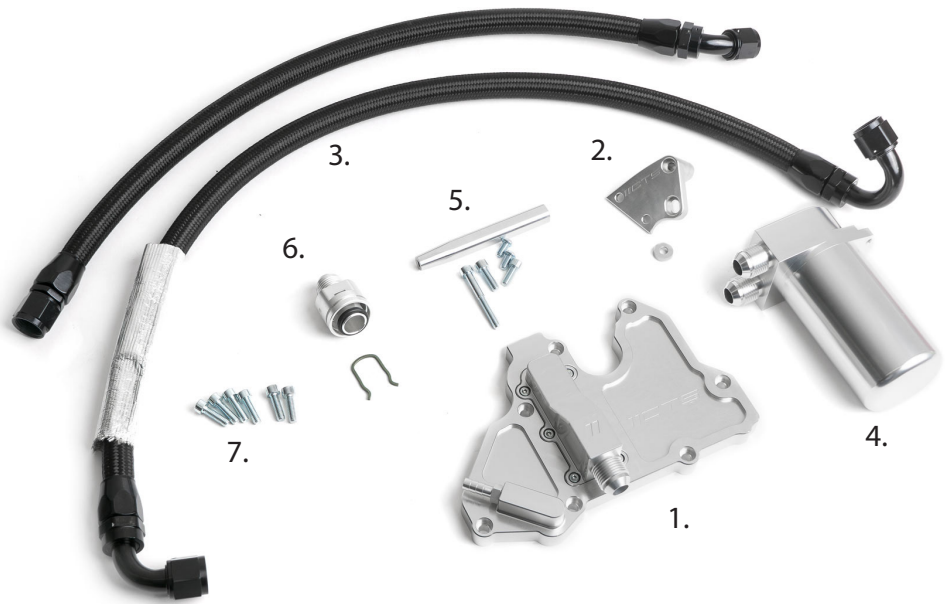

TOOLS REQUIRED

1. T-30 Torx
2. Ratchet
3. 3mm & 4mm Allen
4. Pliers
5. 10mm socket
6. 13mm Wrench

NOTES

Vehicle used in this guide is a 2016 Jetta GLI. Always make sure the car is safe to work on. Do not work on a hot motor. We do not accept any liability for incorrect installation or damage during the install.

STEP 1

Remove stock intake.



STEP 2

Begin with removing the engine cover to access the top of the engine.




STEP 3

Remove the electrical connection to the coilpacks using a 10mm socket




STEP 4

Remove coilpacks 3 & 4

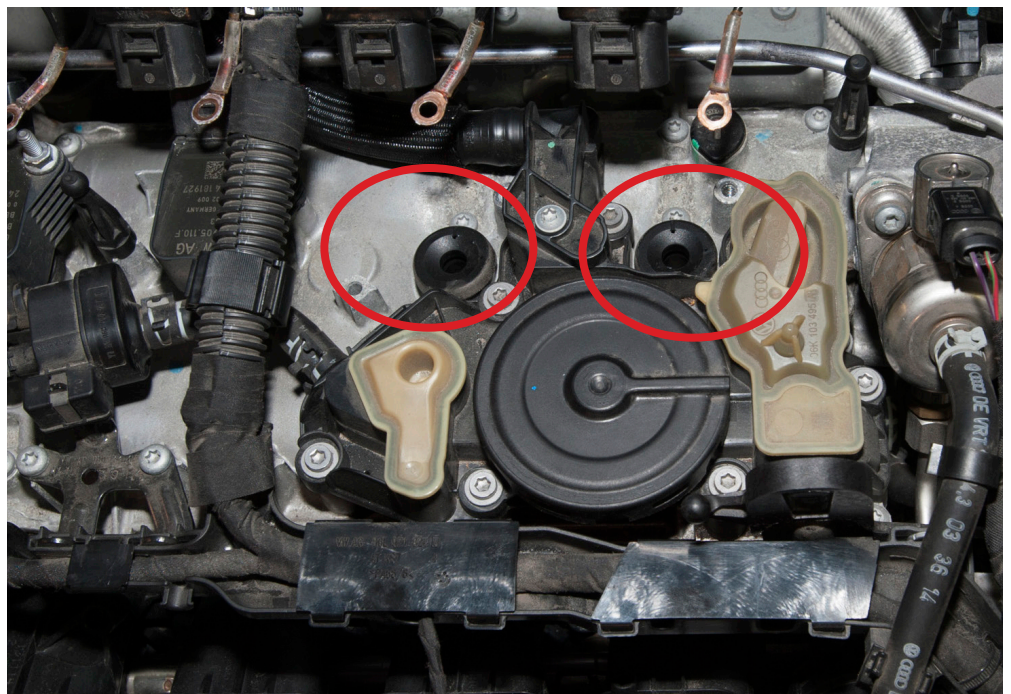


STEP 5

Use pliers to loosen clamp from EVAP line and remove OEM breather plate

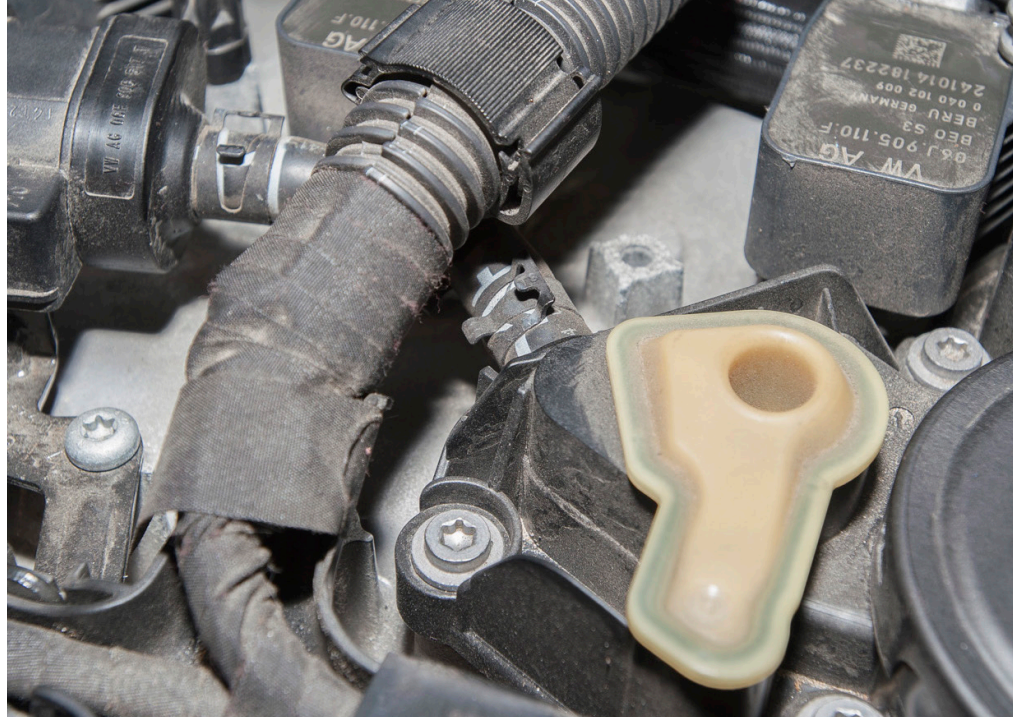

STEP 6

Remove the seven T30 torx screws holding the OEM breather plate in place.

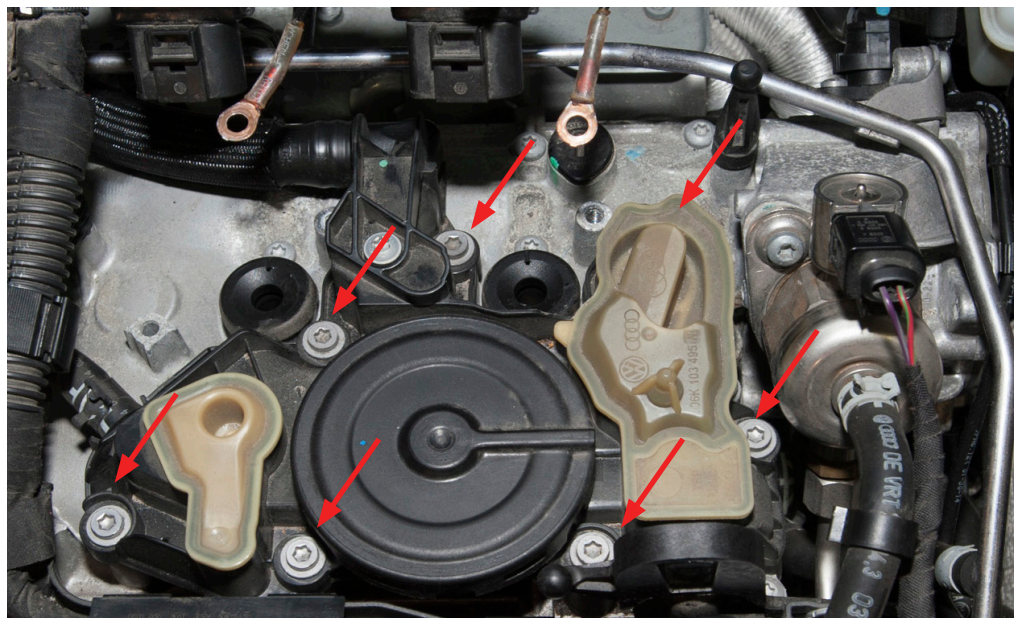

STEP 7

Pull up on the breather plate to remove it from the top of the engine block.

**STEP 8**

Transfer the gasket from the factory breather plate to the CTS breather plate.

Note:

Be careful when removing not to tear the gasket.



STEP 9


Install the CTS breather plate with provided 7 screws.

You may also reinstall coilpacks 3 & 4 and electrical connections at this point.




STEP 10

Reattach EVAP line to breather plate.

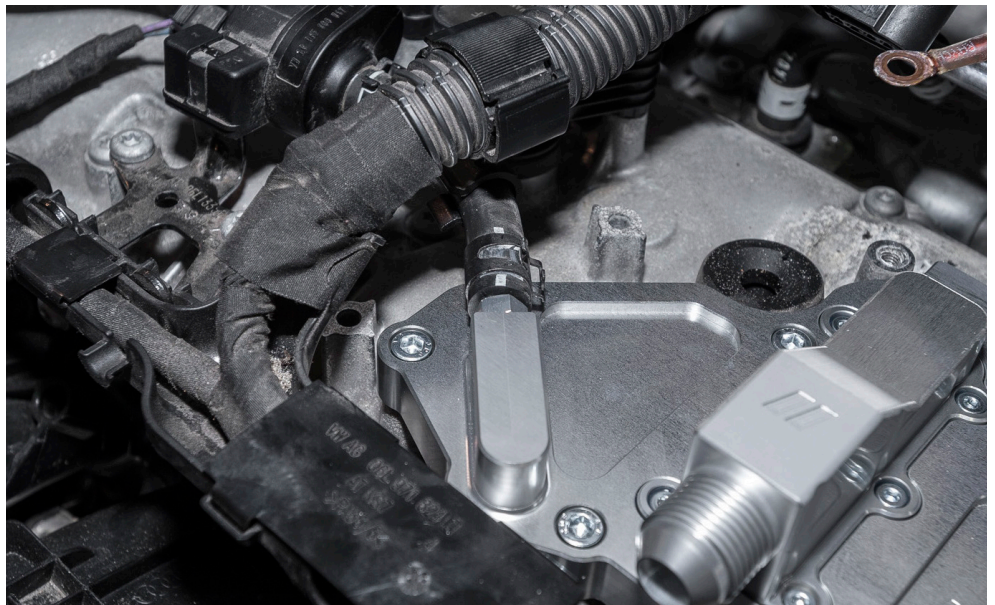

STEP 11

Unclip the plastic guide from the harness.

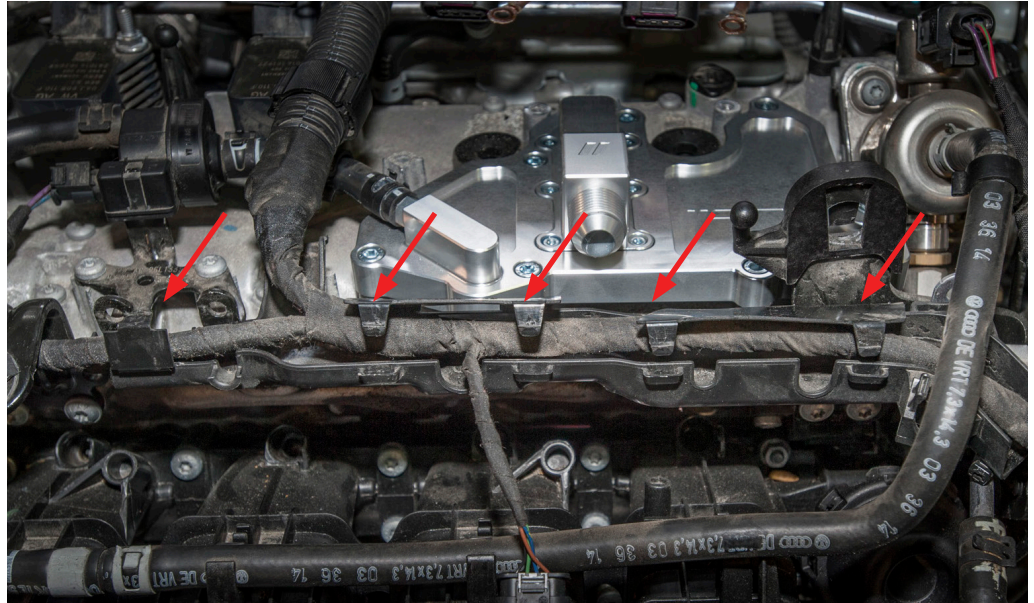


STEP 13

The catch can needs to be mounted to the engine mount and stud on the engine mount bolt.


If you do not have this bolt you can order one from your dealership using this part number:

N91029602

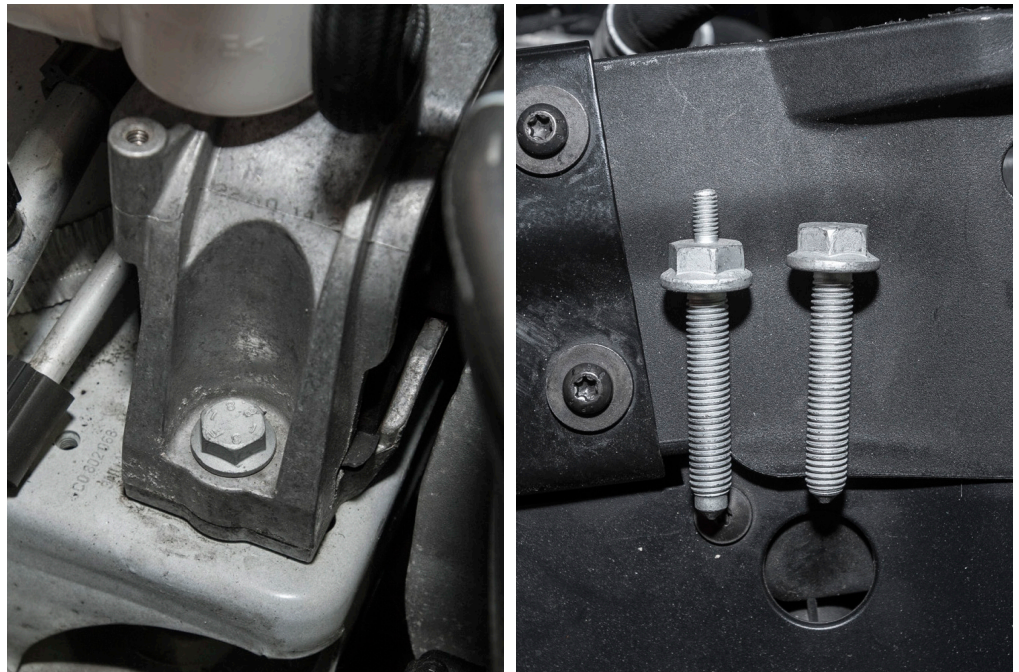

STEP 14

Thread in the mounting rod onto the engine mount stud. A 13mm wrench can be used to tighten it down.

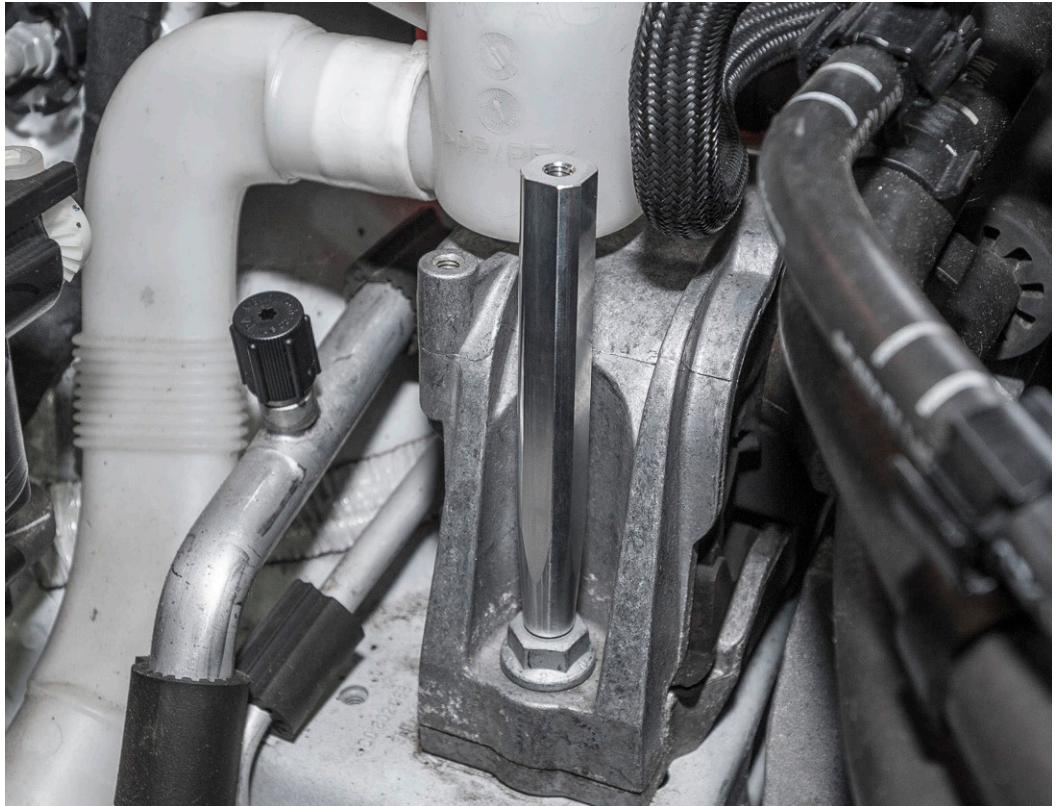

STEP 15


Install catch can bracket with 4mm allen.

Make sure to use provided shim on engine mount



STEP 16

Attach catch can to bracket
with provided 3mm allen
screws

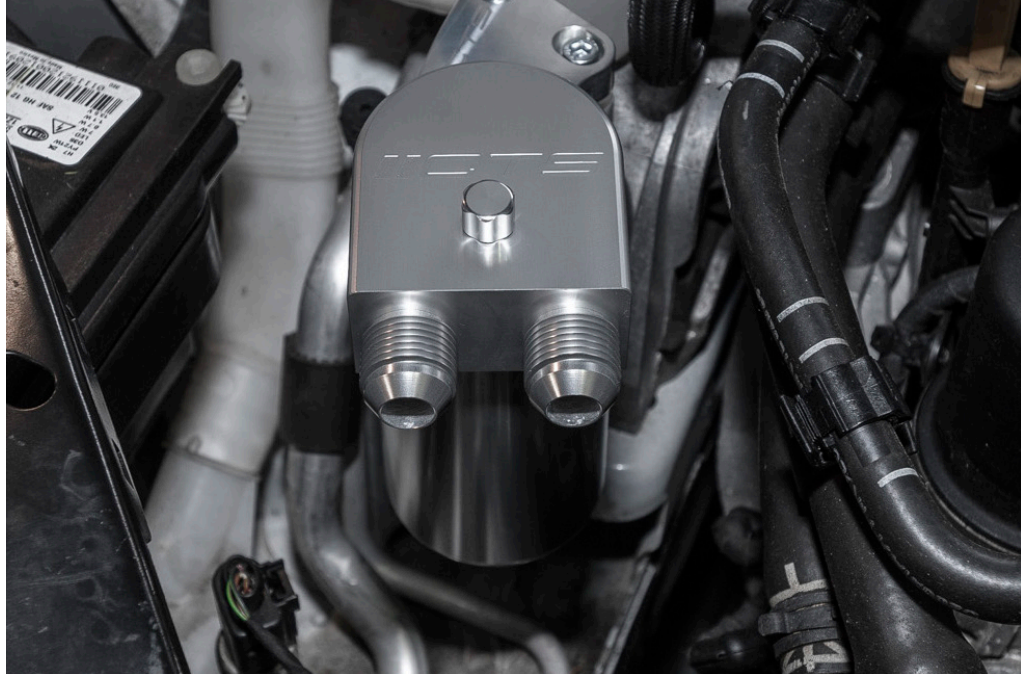**STEP 17**

Connect breather hose and
breather adapter



STEP 18

Connect the breather adapter to the intake and insert provided pin.

Reinstall the intake at this point.




STEP 19

Attach the other end of breather hose to catch can.




STEP 20

Attach the 2nd breather hose to the breather plate and catch can.

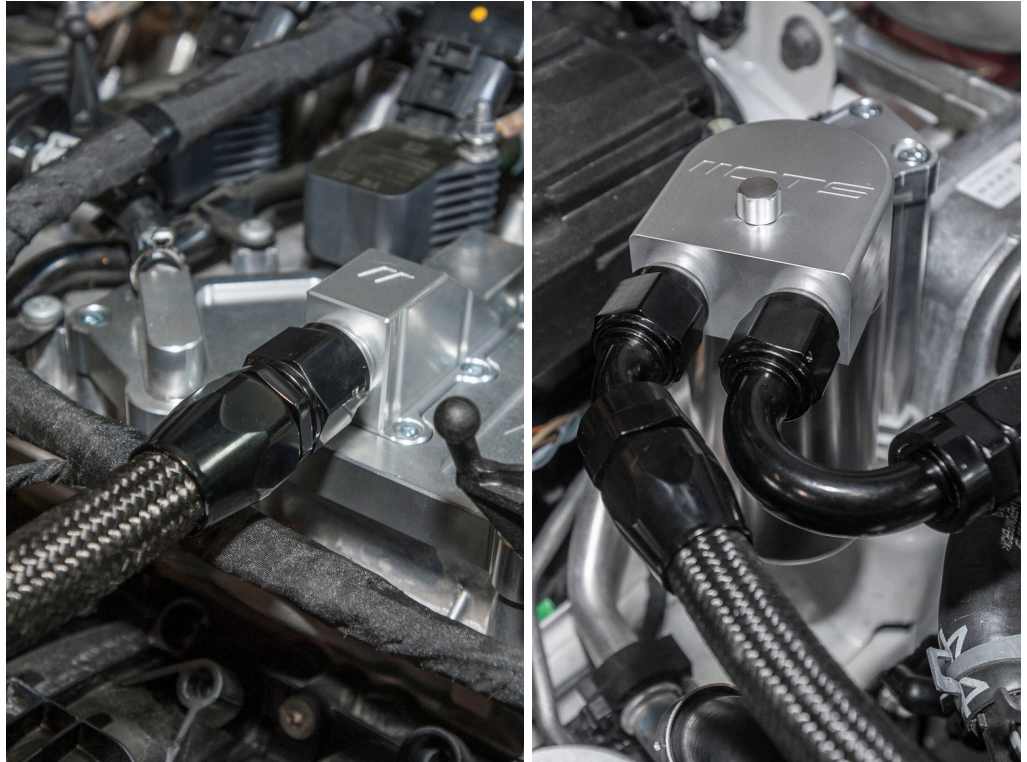

STEP 21

Use provided zip ties to secure breather hose.

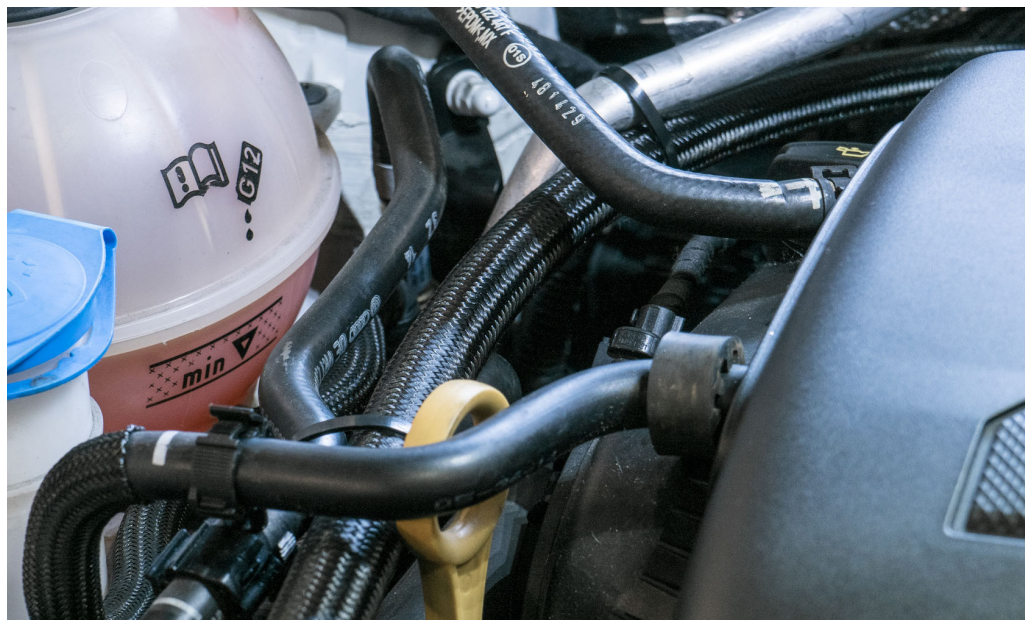

STEP 22

Reinstall the engine cover and you are done.

