



-INSTALLATION- INSTRUCTIONS

▶ LP ADVENTURE BUMPER GUARD ◀


SUBARU WRX & STI 2015 - 2020

CONGRATULATIONS FOR YOUR NEW LP AVENTURE BUMPER GUARD!

If you have any question or need assistance
during the installation please
contact our team. You
can find the information
on the last
page.



IN THE BAG

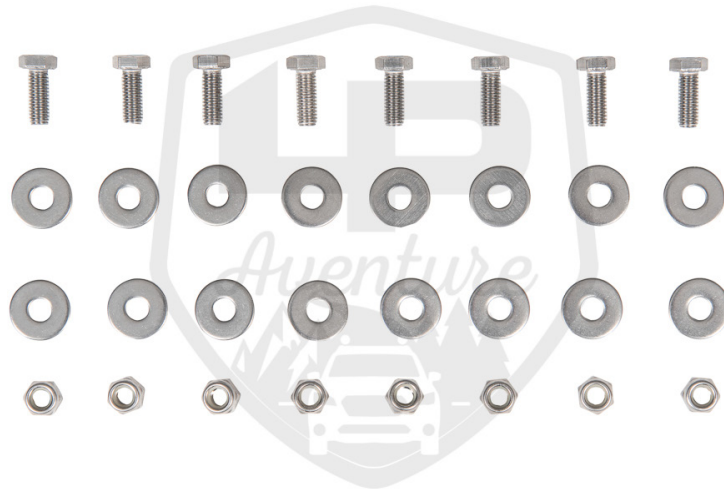



NECESSARY TOOLS

1. - We recommend the use of a lift
2. - Jack stand to support the bumper guard
3. - Ratchet
4. -12mm Socket
5. -14mm Socket
6. -12mm Wrench
7. -14mm Wrench
8. - Knife

1

UNCLIP PLASTIC DEFLECTORS






2

LOWER PLASTIC DEFLECTORS DOWN



3

REMOVE SUPPORT BOLT

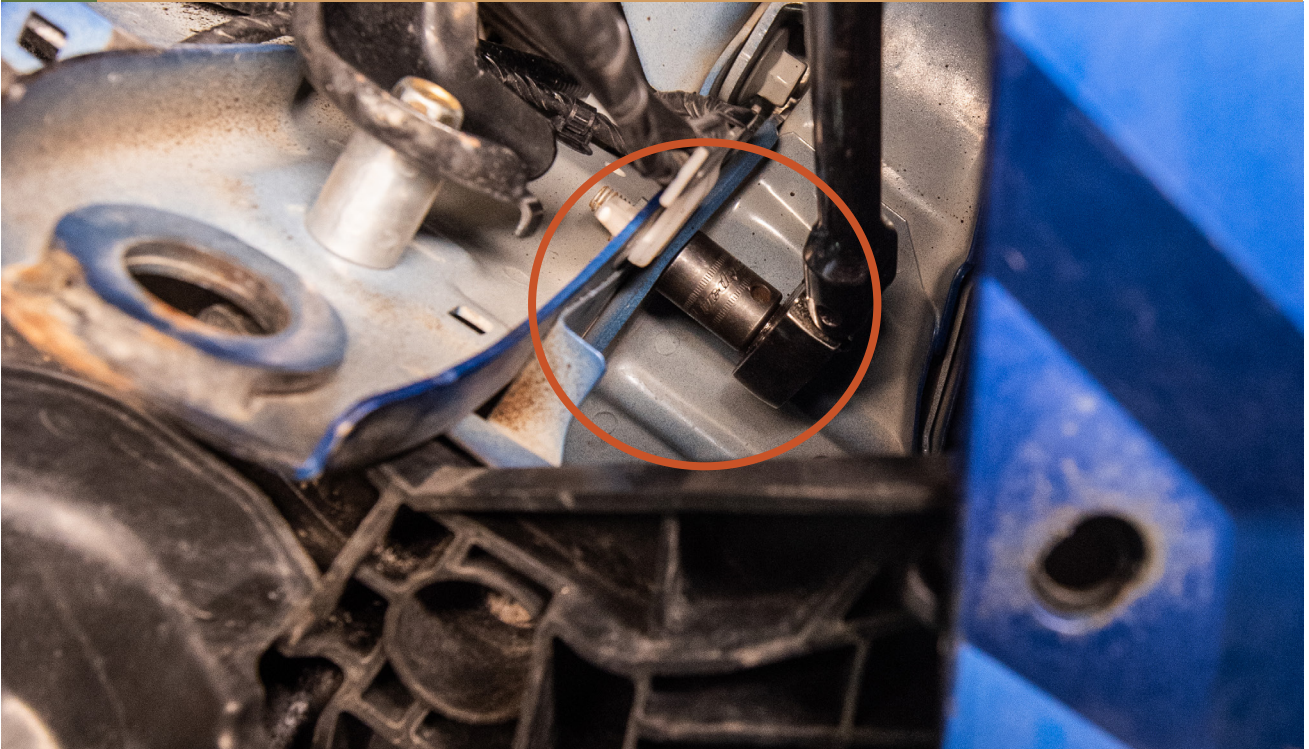

4

INSTALL BUMPER GUARD SUPPORT RODS.



▼
MAKE SURE TO USE THE CORRECT ROD FOR EACH SIDE OF THE VEHICLE; R = DRIVERS RIGHT SIDE



▼
THREAD IN SUPPORT ROD BUT DO NOT TIGHTEN ALL THE WAY



*

FOR STI'S YOU NEED TO TRIM THE UNDERTRAY.
WRX OWNERS CAN CONTINUE TO STEP #5





5

REMOVE TWO REAR CROSSMEMBER BOLTS





6

USE A JACK AND PIECE OF WOOD OR A FRIEND TO HELP SUPPORT THE BUMPER GUARD DURING INSTALLATION



7

RAISE THE BUMPER GUARD INTO PLACE



8

SECURE THE REAR OF THE BUMPER GUARD BUT DONT TIGHTEN ALL THE WAY



9 ATTACH THE FRONT OF THE BUMPER GUARD TO THE SUPPORT RODS



10 NOW TIGHTEN ALL THE HARDWARE





11

RE CLIP PLASTIC DEFLECTOR



12

INSTALLATION COMPLETE!





You have completed the installation.
Thank you for your interest
in our products.

For all requests, information or
assistance: Contact our team
by phone at
1 (866) 562-1316

We are available Monday to Friday
Between 8AM and 5PM (EST).

Or by email at :
SALES@LPAVENTURE.COM
WWW.LPAVENTURE.COM

NOW, ENJOY THE RIDE!