

VERUS ENGINEERING

Hood Scoop Block-Off Kit– VA WRX and STI Install Manual



Author: Eric Hazen
Release Date: 2020/04/26
Approvals: E. Hazen, C. Warner

Document Revisions

Rev	Date	Author	Description
01	2020/04/26	E. Hazen	Initial release of install manual

Confidential: Property of Verus Engineering. Not for Distribution outside intended recipient list.

Hood Scoop Block-Off for VA WRX and STI – Install Manual

CONTENTS

1. Introduction	<3>
1.1. Overview	<3>
1.2. Difficult	<3>
1.3. Time Required	<3>
1.4. Tools Needed	<3>
1.5. Hood Scoop Block-Off Components	<3-4>
2. Hood Scoop Block-Off Install	<4-8>

Hood Scoop Block-Off for VA WRX and STI – Install Manual

1. Introduction

1.1. Overview: Detailed instructions on installing the hood scoop block-off on the VA WRX and STI.

1.2. Difficulty: Easy

1.3. Time Required: 0.5 hour

1.4. Tools Needed:

- 1.4.1. 8mm Socket
- 1.4.2. Ratchet
- 1.4.3. 2.5mm Allen Wrench
- 1.4.4. Small Screwdriver



1.5. Hood Scoop Block-Off Components

1.5.1. Hood Scoop Block-Off


1.5.2. Hardware Bag

- 1.5.2.1. (2) M4 x 0.7 Clip On Nuts
- 1.5.2.2. (2) M4 x 0.7 BHCS (Button Head Cap Screw) x 12mm Long, Stainless
- 1.5.2.3. (2) M4 Fender Washer, Stainless

Hood Scoop Block-Off for VA WRX and STI – Install Manual

**2. VA Subaru WRX/STI Hood Scoop Block-Off Install**


- 2.1. Verus Engineering is not responsible for damage to you or your vehicle by following this manual and/or installing Verus Engineering products.
- 2.2. We begin by gaining access to the bottom of the hood by popping and lifting the hood.
- 2.3. We need to remove the hood scoop itself for this install; so we'll need to remove the (6) 8mm head bolts circled below.

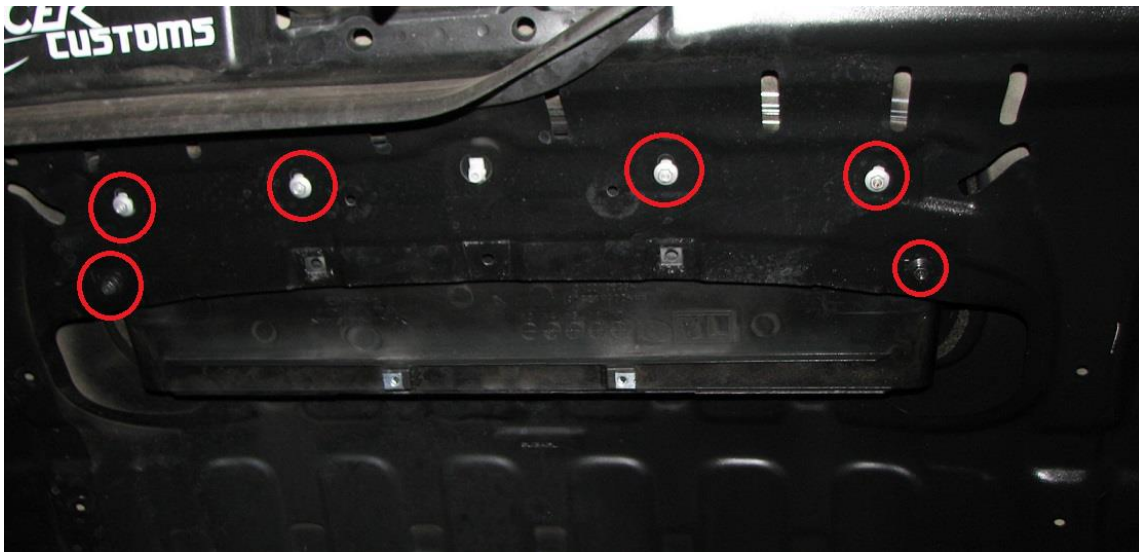

Confidential: Property of Verus Engineering. Not for Distribution outside intended recipient list.

Hood Scoop Block-Off for VA WRX and STI – Install Manual

- 2.4. The last part to remove on the hood scoop is the plastic square push in pin. Needle nose pliers or a small screwdriver can help you remove this. Pull up and then push the tabs in. The image below shows you the plastic square push pin we are talking about.

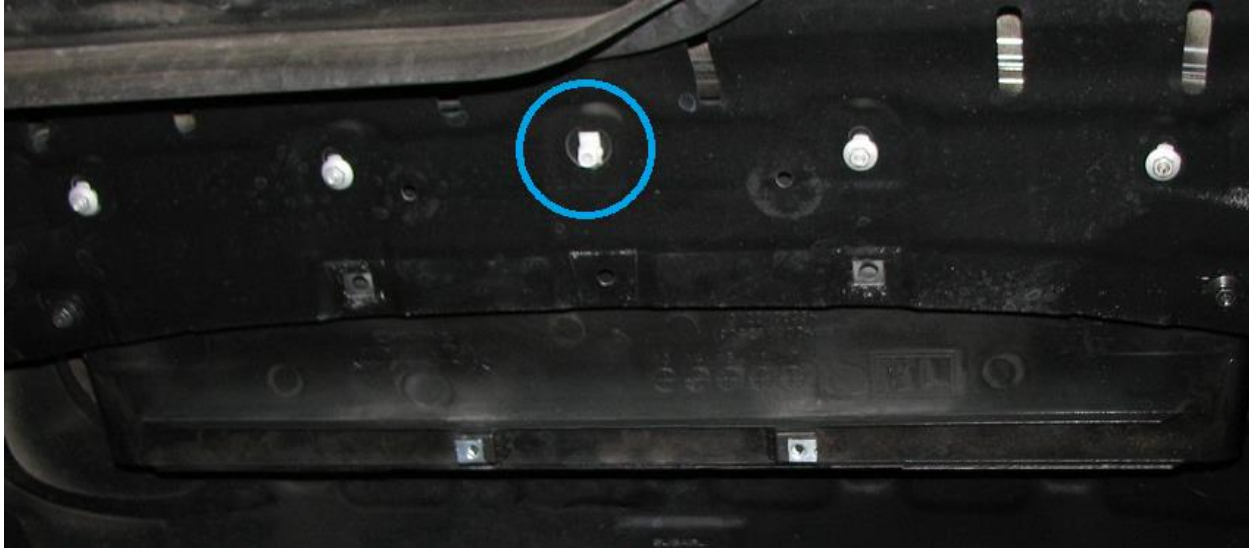

- 2.5. With the hood scoop off the car, we can now work on installing the hood scoop block-off. We recommend a soft surface as the hood scoop will be flipped over.



- 2.6. Install the M4 push-clips as shown below. Simply push them on.



Hood Scoop Block-Off for VA WRX and STI – Install Manual



- 2.7. We can now install the hood scoop block-off. The (3) tabs on the top of the block-off go above the opening, with the (2) holes on the bottom of the plate bolting to the push-clips we installed in 2.6.



- 2.8. Press the block-off towards the opening (red arrows) and then fully tighten the M4 BHCS (yellow circles).

Hood Scoop Block-Off for VA WRX and STI – Install Manual



2.9. We can now install the hood scoop back onto the car. It will go back together a bit tighter than factory. This helps ensure the block-off will remain in place.

2.10. Tighten the (6) 8mm bolts onto the hood.



2.11. Congratulations on installing the Verus Engineering Hood Scoop Block-Off Kit for the VA WRX and STI.

2.12. Please send any questions, comments, concerns, or photos to Verus Engineering via e-mail; sales@verus-engineering.com.



Hood Scoop Block-Off for VA WRX and STI – Install Manual



Confidential: Property of Verus Engineering. Not for Distribution outside intended recipient list.