



GrimmSpeed Install Guide Series
Post MAF Hose Kits - 15-21 Subaru WRX
Updated 10/7/2021



Introduction:

This guide will walk you through the install steps for The GrimmSpeed Post MAF Hose Kits for '15-'21 Subaru WRX models

Notes:

This install was done on a 2020 Subaru WRX. Keep in mind that some steps may vary slightly by year, but installation will generally be the same.

Tools:


- Ratchet wrench
- 8mm and 10mm sockets
- Flathead screwdriver
- Ratchet extension

If you have any questions don't hesitate to contact us directly via email or phone:

support@grimmspeed.com | 612-379-0000

Removing the OEM Post MAF Hoses

1. Locate the air intake box assembly in your engine bay. Remove the two pop clips holding the air intake snorkel in place. Pull the snorkel up and out, place it aside.

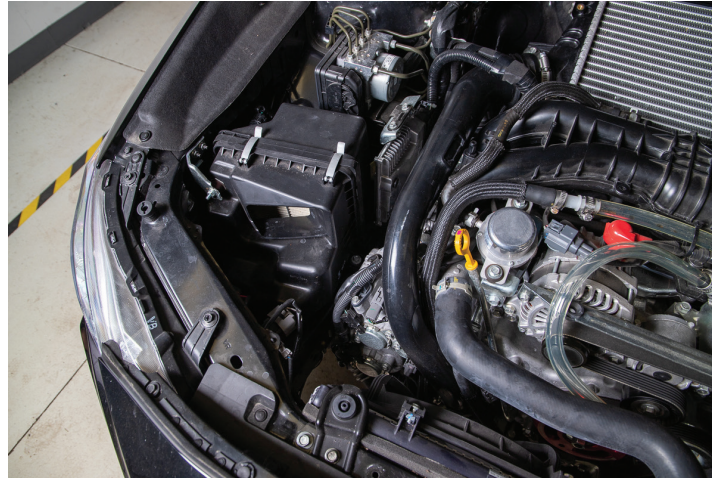

2. Remove the three bolts holding the air intake box in place. Two are located on a bracket, the other is inbetween the intake box and engine.



3. Unclip the MAF sensor located on the top side of the intake assembly. If you find the clip difficult to release, carefully use a flathead screwdriver for leverage.



4. Find the airbox outlet and loosen the worm clamp with a ratchet wrench using an 8mm socket. Once loose, you can remove the airbox from the engine bay and place it aside.



5. Moving to the underside of the car, you will need to loosen the worm clamp connecting the OEM rubber hose to the turbo inlet. Once loose, pry the hose off the turbo inlet.



6. Locate the chassis mounting bracket holding the OEM MAF hose assembly in place. Remove the 10mm nut and pull the whole OEM MAF hose assembly out.



7. Using an 8mm socket, loosen the worm clamps and remove the OEM rubber hoses from the OEM plastic tube.




8. Use the worm clamps included in your kit to install your new GrimmSpeed MAF hoses in the same orientation as shown below.



9. Carefully lower your airbox back into the engine bay and remount your hose connection. Make sure the MAF hose is fully seated onto the airbox and tighten the worm clamp.



10. Clip the MAF sensor back into the airbox, tighten all the mounting points and reinstall the air snorkel. **No tune is required.**

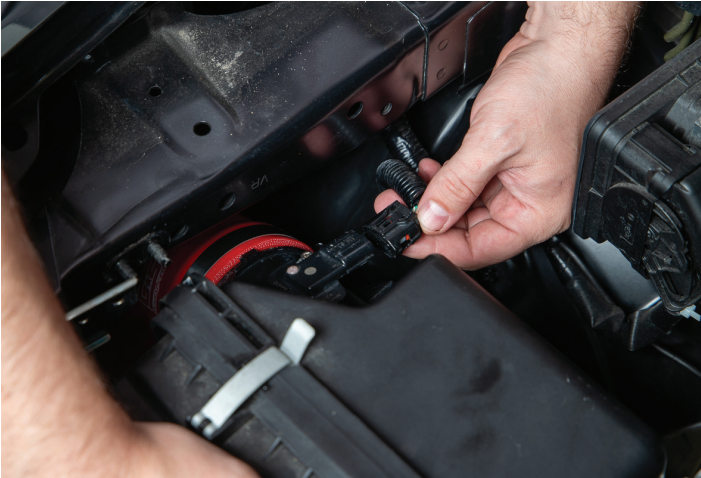

11. Enjoy!

If you have any questions don't hesitate to contact us directly via email or phone:

support@grimmspeed.com | 612-379-0000