



-INSTALLATION- INSTRUCTIONS

▶ LP ADVENTURE TRAILING ARM SHIELDS ◀

SUBARU FORESTER WILDERNESS 2022+

CONGRATULATIONS FOR YOUR NEW LP AVENTURE TRAILING ARM SHIELDS!

If you have any questions or need assistance during the installation please contact our team. You can find the information on the last page.



IN
THE
BOX



IN THE BAG





NECESSARY TOOLS

-Jack (or car lift)

-Ratchet

-17mm socket

-17mm wrench

-12mm socket

-12mm wrench

1

REMOVE HAND BRAKE BRACKET BOLT





3

REMOVE LOWER TRAILING ARM BOLT





4

INSTALL TRAILING ARM SHIELD



5

RE INSTALL THE FACTORY HAND BRAKE CABLE
BRACKET BOLT AND NUT BUT DO NOT TIGHTEN YET



6

INSTALL THE INCLUDED LOWER TRAILING ARM NUT AND BOLT



7

TIGHTEN THE HAND BRAKE CABLE BRACKET NUT



8

TIGHTEN THE LOWER TRAILING ARM BOLT




9

REPEAT STEPS ON THE OTHER SIDE



INSTALLATION COMPLETE!

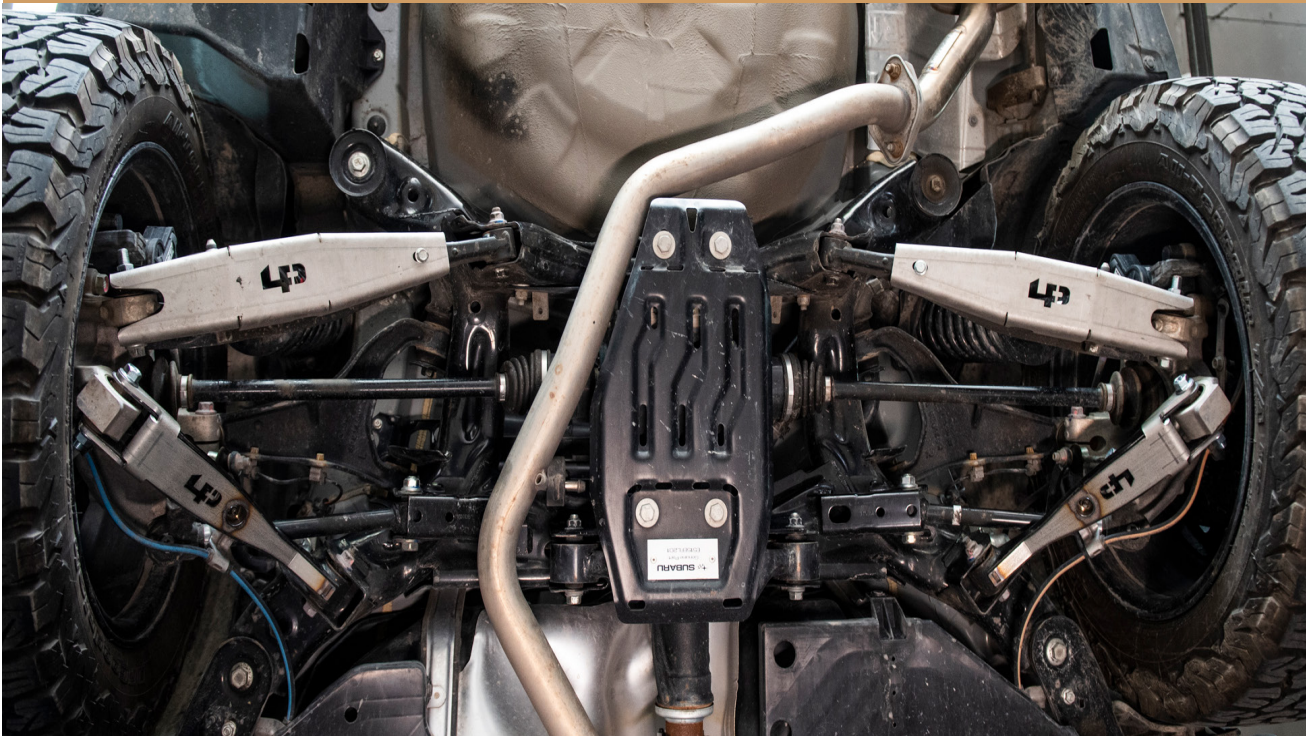



NOTES:

****Tighten all the bolts to the manufacturer's specifications with a Torque Wrench****

**Double check your work.
and be sure to tighten
the nuts with a torque wrench.**

**Products warnings:
<https://lpaventure.com/pages/products-warnings>**

**Limited product warranty:
<https://lpaventure.com/pages/limited-product-warranty>**



**You have completed the installation.
Thank you for your interest
in our products.**

**For all requests, information or
assistance: Contact our team
by phone at
1 (866) 562-1316**

**We are available Monday to Friday
Between 8AM and 5PM (EST).**

**Or by email at :
SALES@LPAVENTURE.COM
WWW.LPAVENTURE.COM**

NOW, ENJOY THE RIDE!