

SPEC-D *Tuning*

2004-2005 SUBARU WRX PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS



If you experience any difficulties that the instruction did not cover, Please seek local auto shop for advise.
Please wear protection before you work on your vehicle.

An assistant is helpful when removing the front bumper.

Please be careful while working with the bumper or body part to avoid scratching.

Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

Handy Remover	1/4" Drive Ratchet	8mm Socket
Trim Pad Remover	1/4" Drive Extensions (3 to 6 inches)	
Phillips Screwdriver	12mm Socket	
Flat Tip Screwdriver	10mm Socket	

If your Headlight is Halo type, you also need:

Wire Stripper	4 Blue Male Quick Wire Connectors
Wire Crimper	4 Blue Female Quick Wire Connectors
4 Blue Quick Splice Wire Connectors	2 Red Wires (8 inch)
	2 Black Wires (8 inch)

Product Part Numbers:

2LHP-WRX05-TM

2LHP-WRX05BK-TM

2LHP-WRX05G-TM

2LHP-WRX05JM-TM



SUBARU WRX PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS



If you experience any difficulties that the instruction did not cover, Please seek local auto shop for advise.
Please wear protection before you work on your vehicle.
An assistant is helpful when removing the front bumper.
Please be careful while working with the bumper or body part to avoid scratching.
Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.



1. Unlock six locks



2. Remove front grille



3. Remove five bolts and four clips




4. Remove the cover



5. Remove two clips



6. Remove the cover, then disconnect the fog light harness

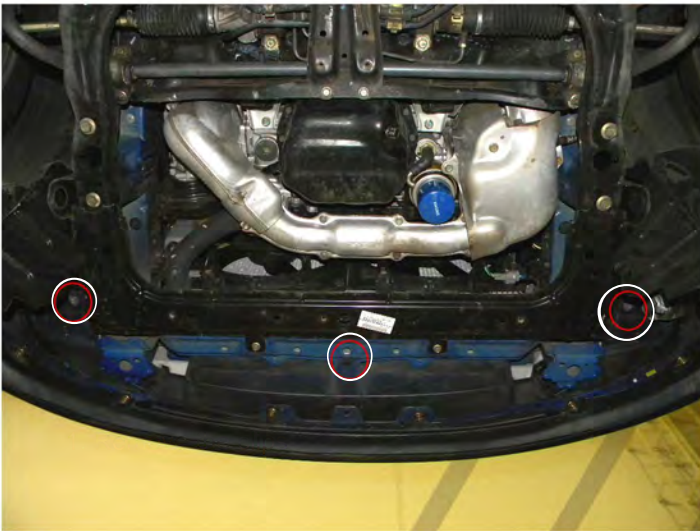

7. Remove three clips



8. Remove two clips, then remove one 10mm bolt



9. Remove nine clips



10. Remove front bumper



11. Remove three 10mm headlight bolts




12. Disconnect headlight harness



13. Remove the headlight




14. Remove driving light harness from OEM headlight

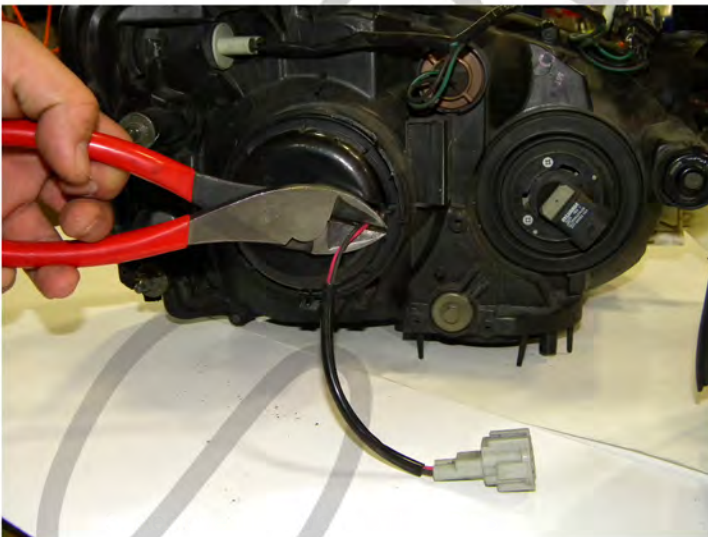

15. Cut the OEM low beam harness
If your headlight does have the same OEM harness, you can skip this step



16. Remove two pins from OEM headlight

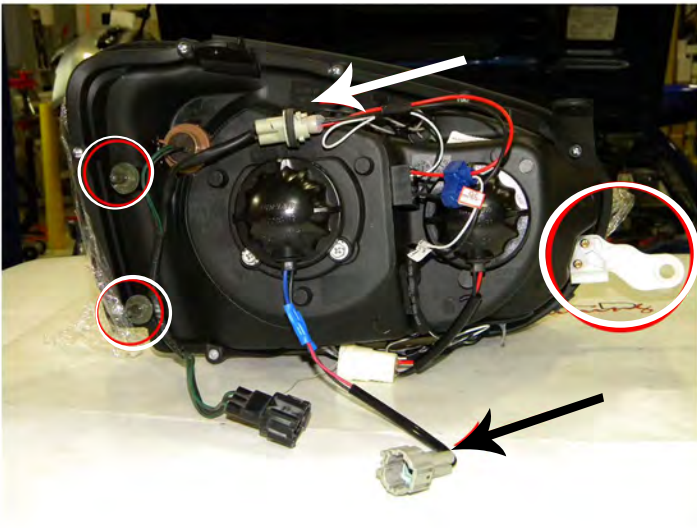

17. Wire driving light harness, two pins, low beam harness, and one bracket on the new projector headlight



18. Connect headlight harness then install the headlight
Please see the "Halo and L.E.D installation instructions"
If your headlights don't have HALO or L.E.D. You can skip



19. Install three 10mm headlight bolts



20. Install the front bumper



21. Install nine clips



22. Install three clips



23. Connect fog light harness



24. Install two clips




25. Install one 10mm bolt and two clips



26. Install cover (five 10mm bolts and four clips)



27. Install front grille
please repeat picture order from 1 to 27 for opposite side

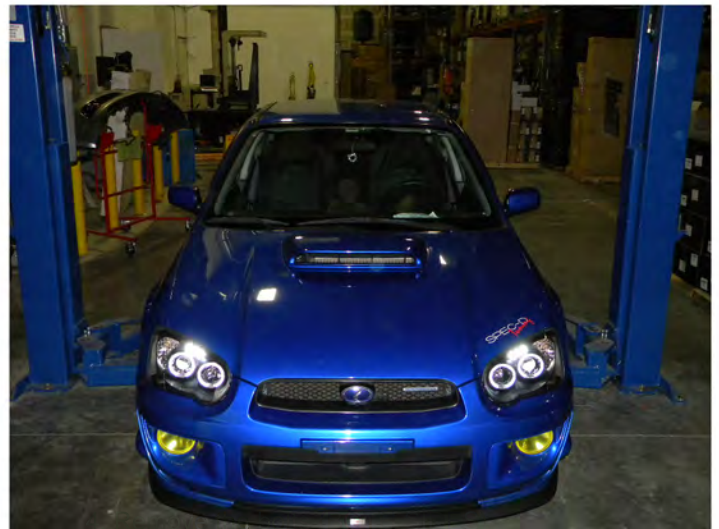

28. The installation is now complete