

INSTALLATION & CARE

2013-2016 SCION FRS LED TAIL LIGHTS INSTALLATION INSTRUCTIONS

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

1/4" Ratchet	8 mm Socket	Trim Pad Remover
		

PRODUCT NUMBER

LT-FRS12BKLED-LB-TM
LT-FRS12JRLED-LB-TM

LT-FRS12GLED-LB-TM
LT-FRS12BBLED-LB-TM



LET'S START THE INSTALLATION



STEP 1

Remove the three plastic clips




STEP 2

Remove the plastic moulding




STEP 3

Remove the plastic clip

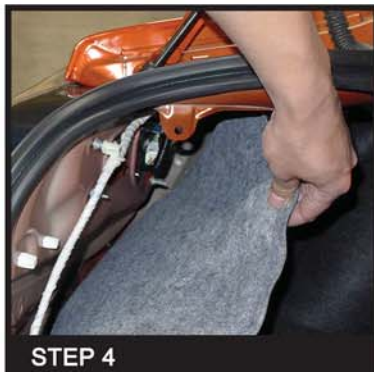


STEP 4

Pull the fender liner aside

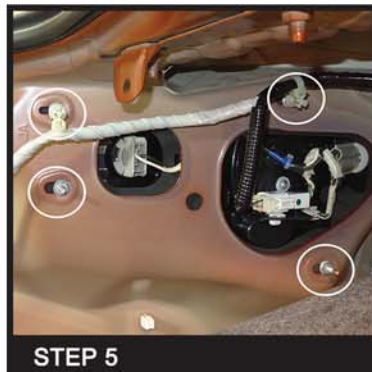

STEP 5

Remove the four 8mm nuts

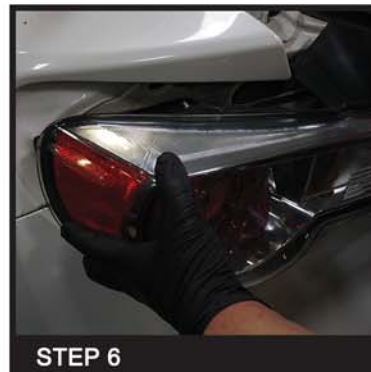

STEP 6

Unseat the factory taillight



STEP 7

Disconnect the taillight harness and remove the factory tail light housing



STEP 8

Uninstall the wire harness from the stock tail light housing




STEP 9

Remove the signal light bulb from the light sockets



STEP 10

Install the wire harness to the new tail light housing

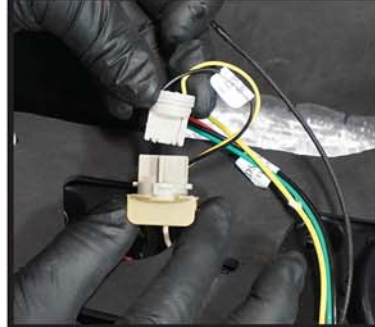

STEP 11

Install the connector to the signal light socket, (+) to (+), (-) to (-)



STEP 12

Connect the tail light harness



STEP 13

Seat the new tail light assembly in place



STEP 14

Tighten the four 8 mm nuts



STEP 15

Use alcohol to clean the metal surface



STEP 16

Set the resistor on the metal area




STEP 17

Connect the resistor wires



STEP 18

Reinstall the plastic clip

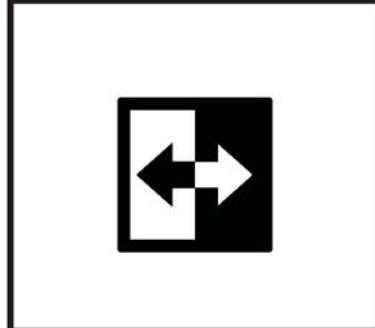

STEP 19

Please repeat the steps from 3 to 18 for the opposite side



STEP 20

Reinstall the plastic trunk moulding



STEP 21

Reinstall the three plastic clips



STEP 22

Close the trunk to complete the installation

2013-2016 SCION FRS LED TAIL LIGHTS INSTALLATION INSTRUCTIONS

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

2013-2016 SCION FRS LED TAIL LIGHTS INSTALLATION INSTRUCTIONS

